



MARONE ELITE SZAFKA NA BUTY PLMEL 25



- (D) Montageanleitung
- (GB) Assembly instructions
- (FR) Notice de montage
- (IT) Istruzioni di montaggio
- (NL) Handleiding voor de montage
- (PL) Instrukcja montażu
- (CZ) Montážní návod
- (SK) Návod na montáž
- (HU) Szerelési útmutató
- (RO) Instrucțiuni de montaj
- (TR) Montaj talimatı
- (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ

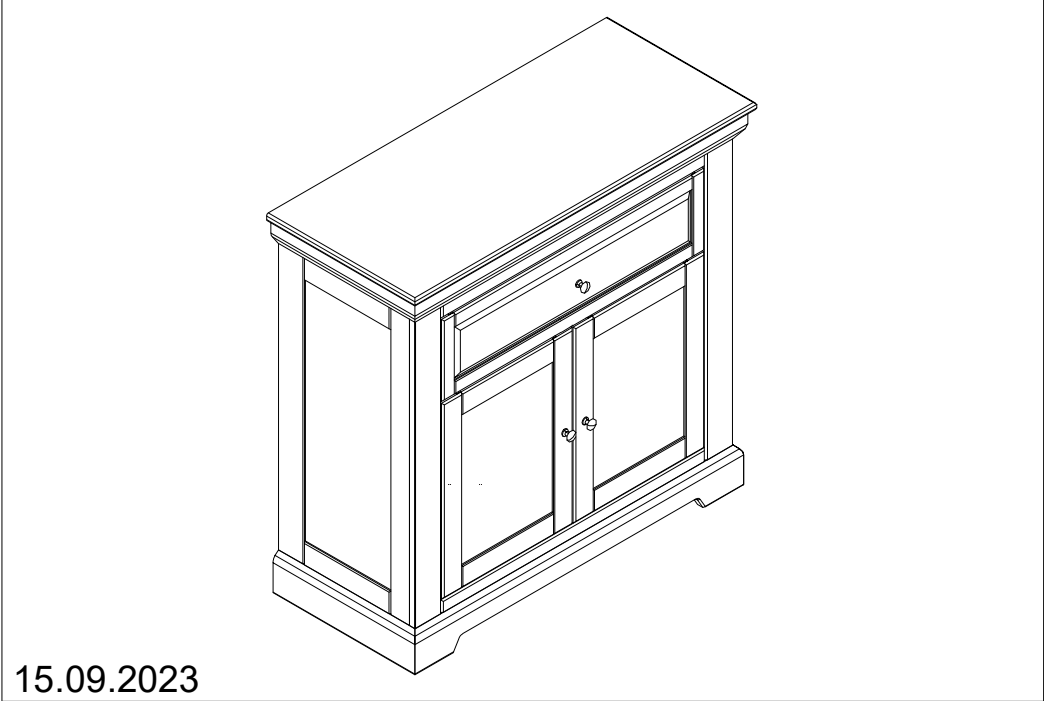




1

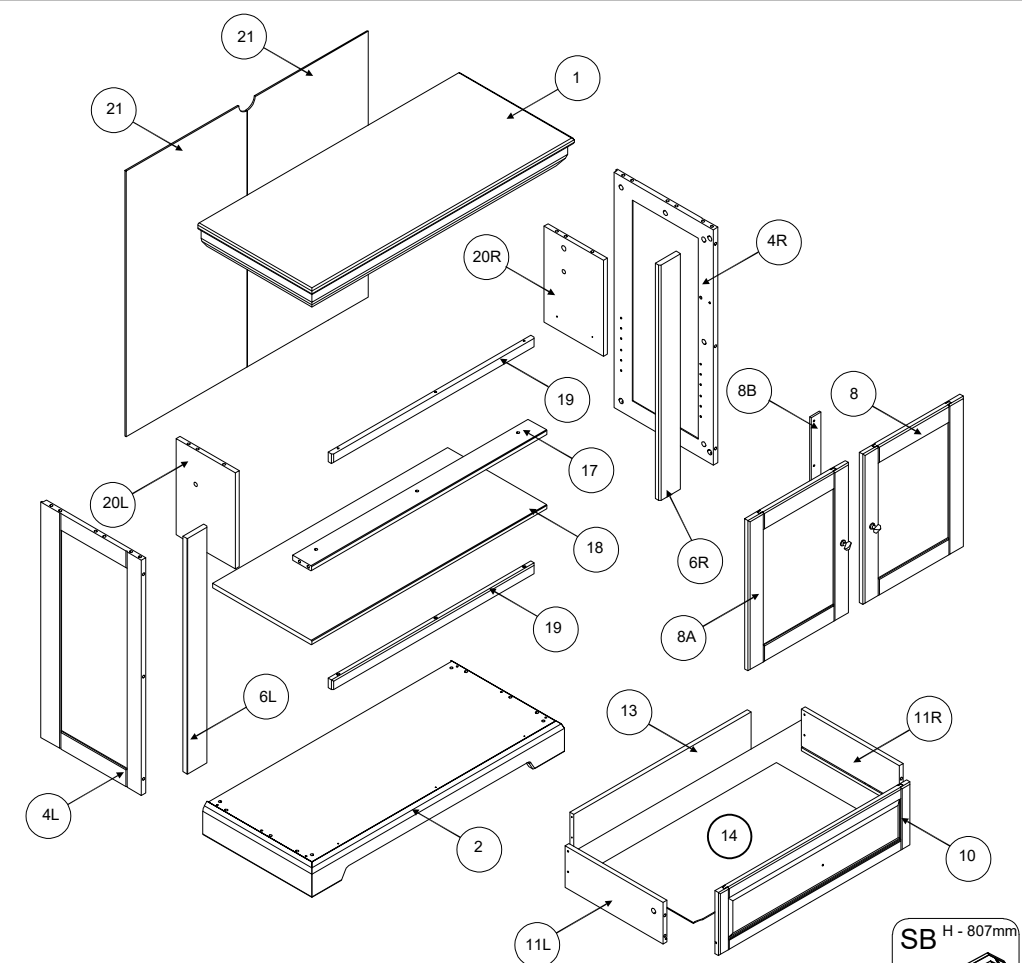



YB 1x20 x39	ZF x2	YA 7x50 x2	ZD 18mm x10	G L=350 x1	H 6x10,5 x4
XE x1	MA x3	W 4mm x1	B 34mm x24	C 15x10 x24	ZA 12mm x6
O x3	P x4	R x4	T x2	A 8x35 x24	NA 3,5x16 x8
				Y 5mm x4	NF 3x16 x4

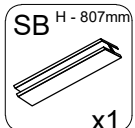



2

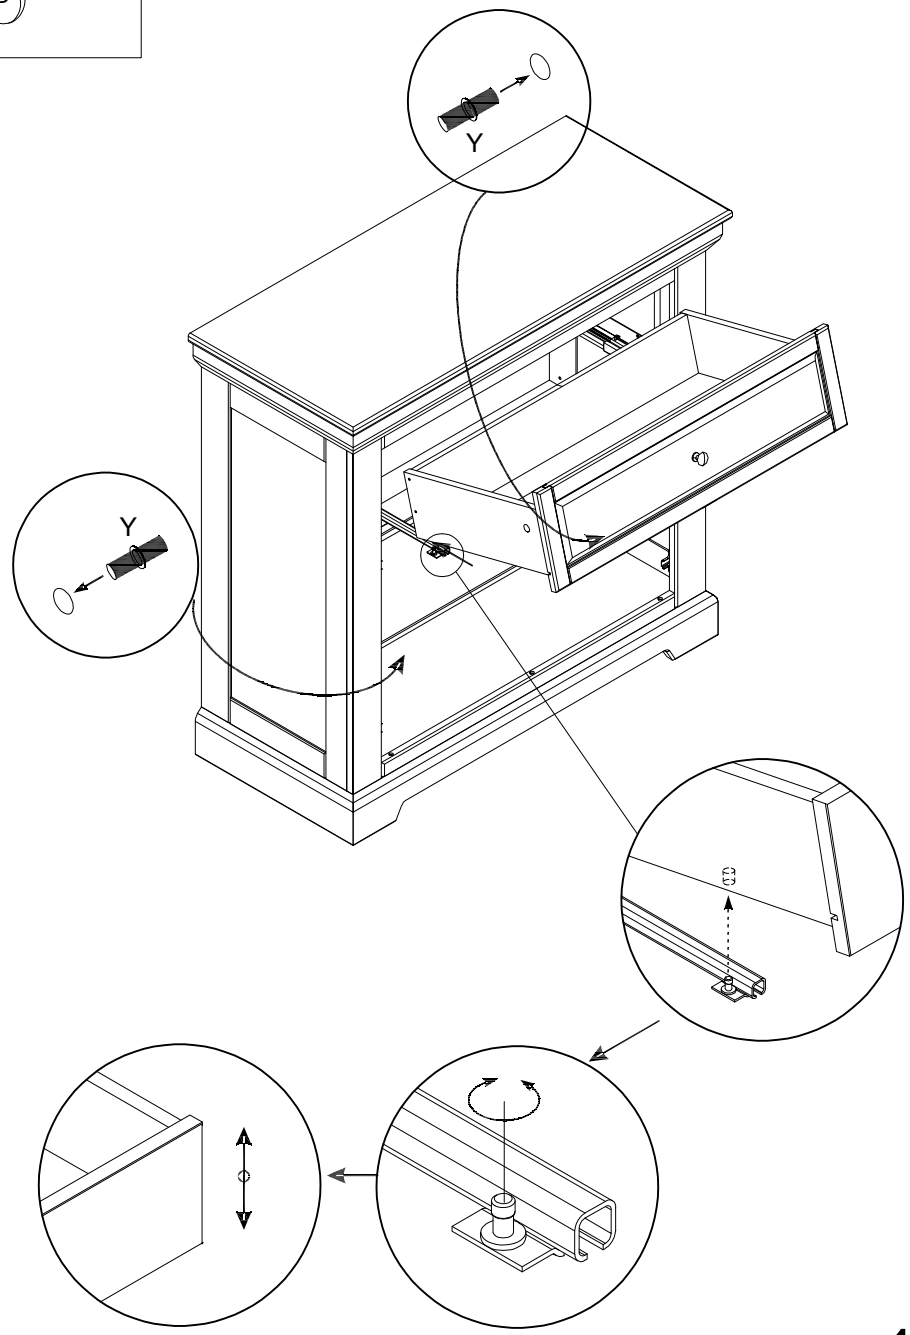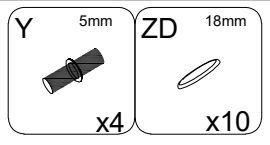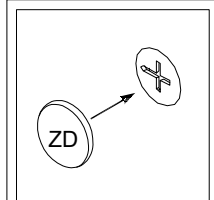

16

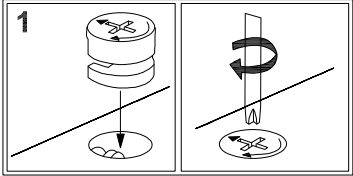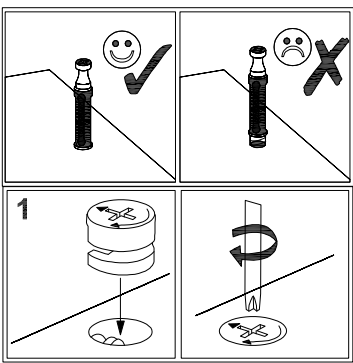



- | | | |
|-----------------|---------------|----------------|
| NT 3,5x40
x4 | YB 1x20
x9 | O
x1 |
| B 34mm
x2 | C 15x10
x2 | YF M4x25
x1 |
| | | A 8x35
x2 |

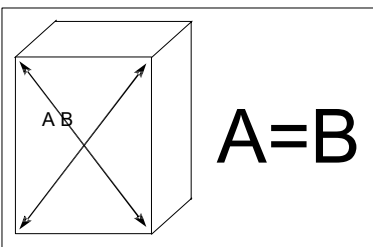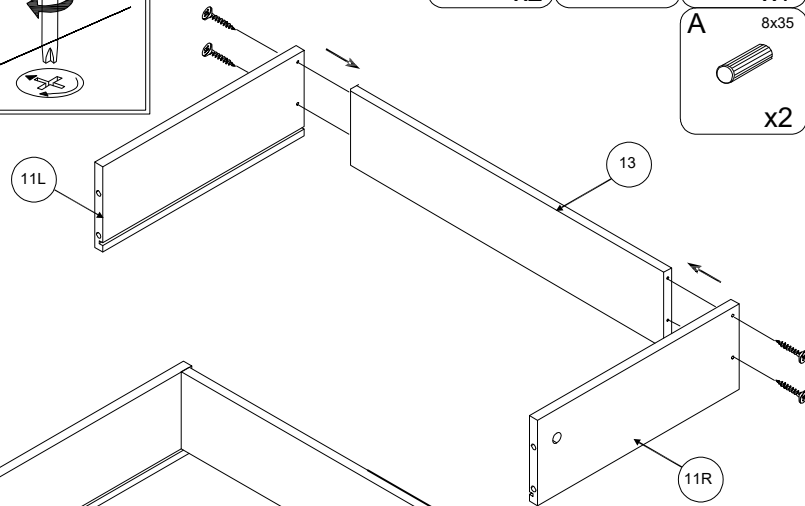



15

3




- | | |
|--------------|---------|
| B 34mm
x6 | R
x4 |
| A 8x35
x4 | |

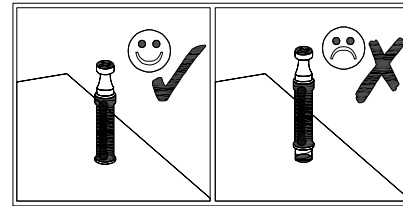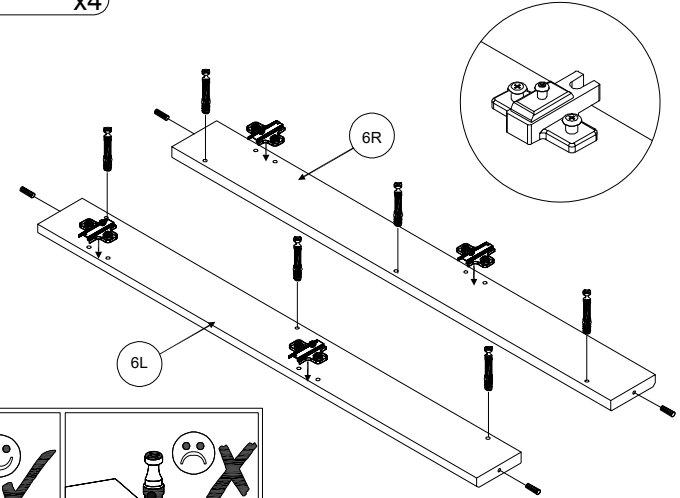

4



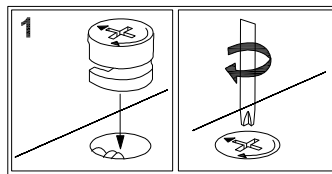
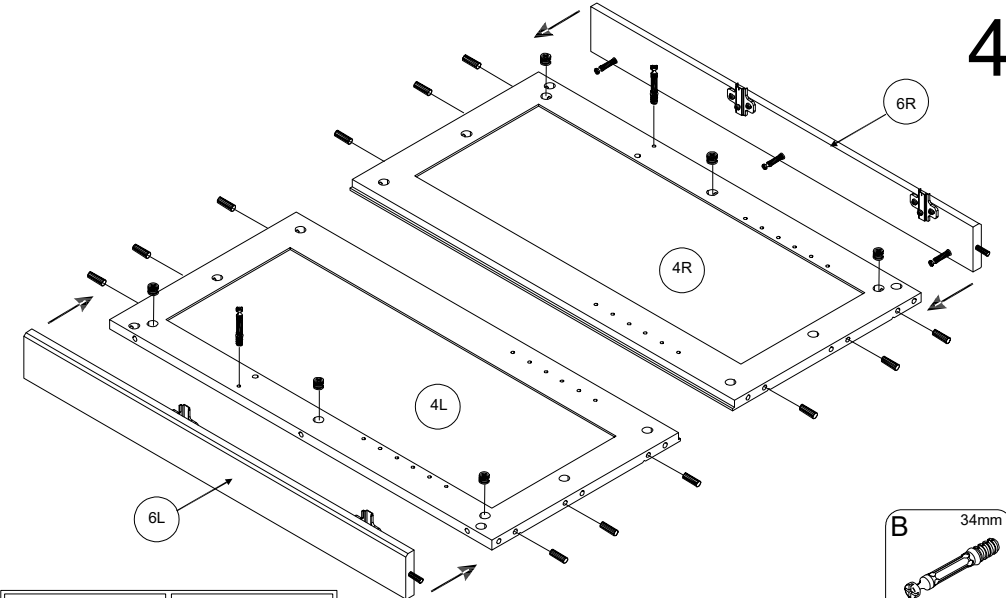


- | | |
|---------------|---------------|
| B 34mm
x2 | A 8x35
x12 |
| C 15x10
x6 | |

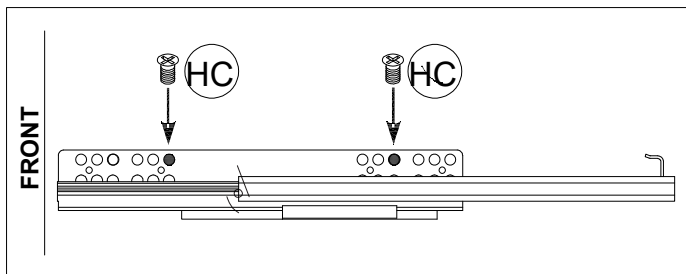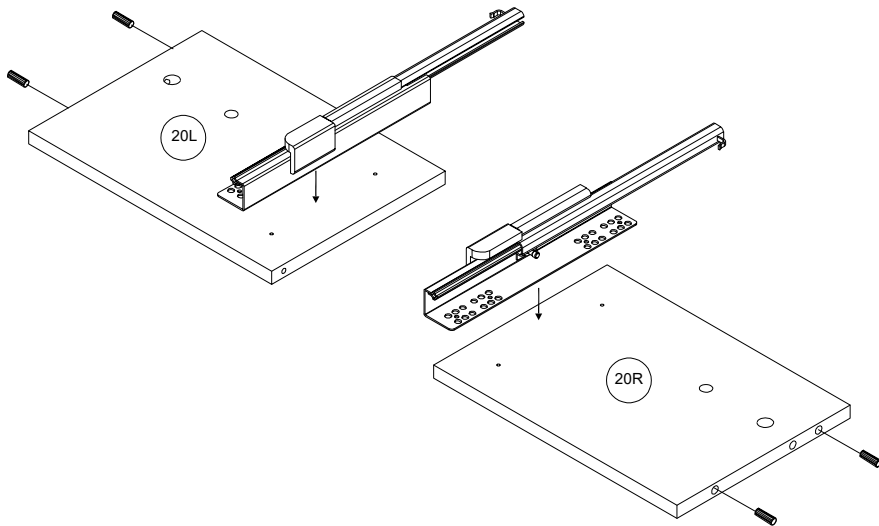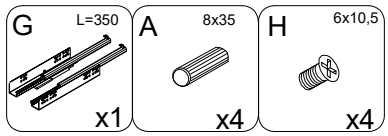

5




13

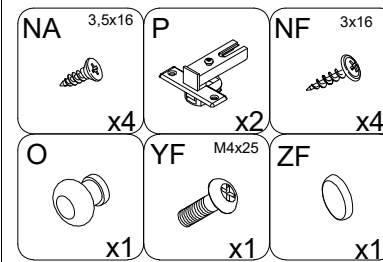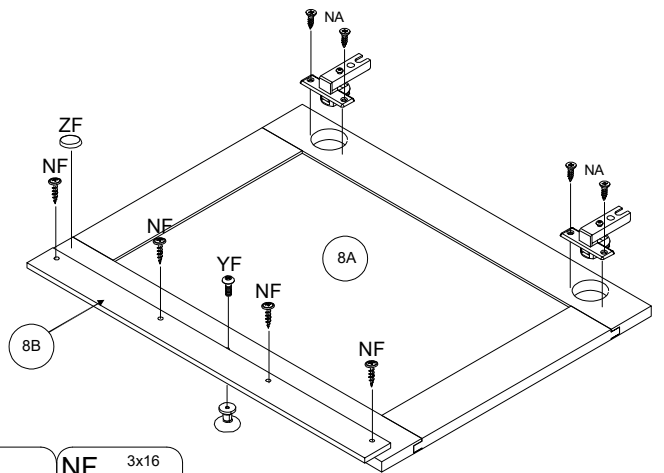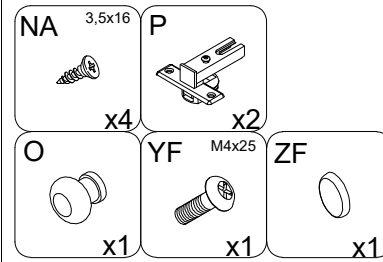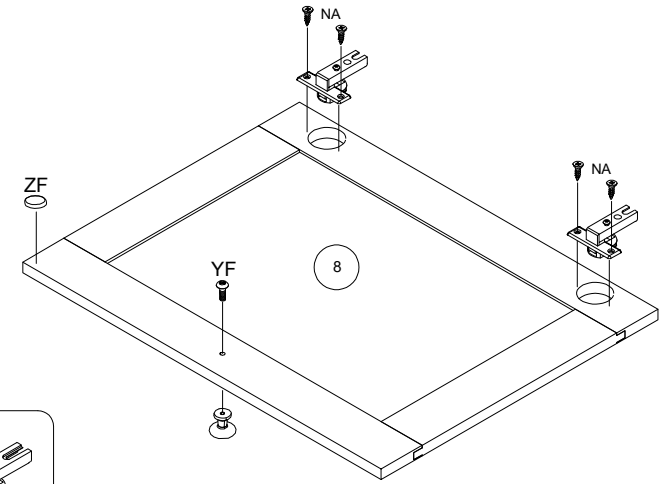

14







- NT 3,5x40 x6
- ZA 12mm x6

11

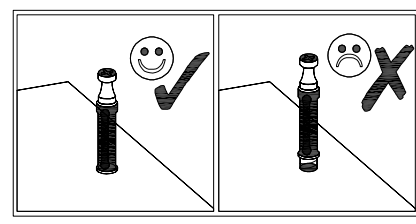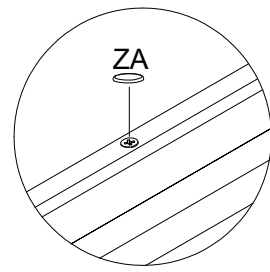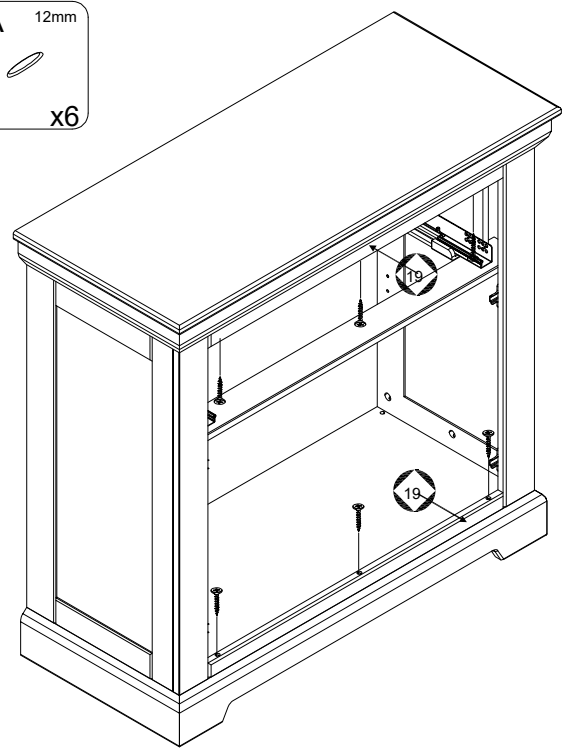

- MA x3
- SB H - 807mm x1
- YB 1x20 x39

12

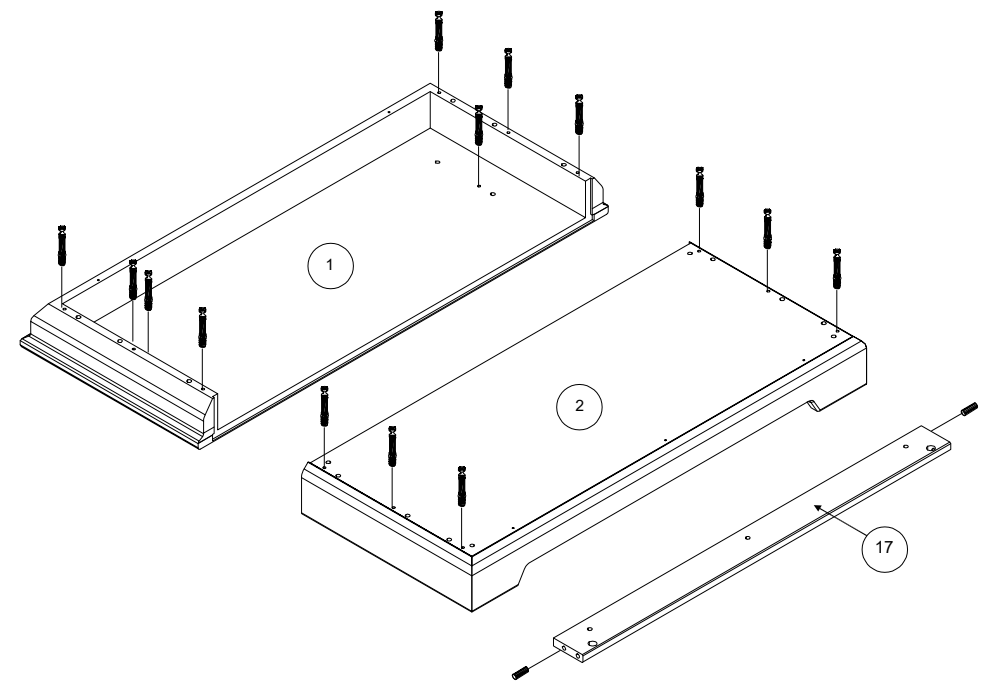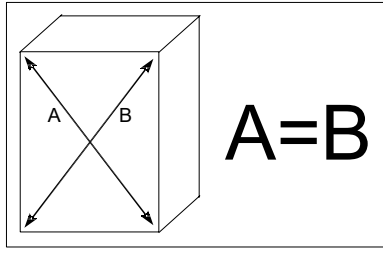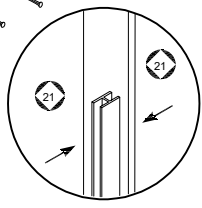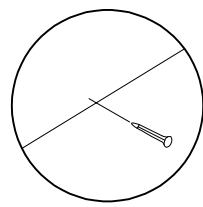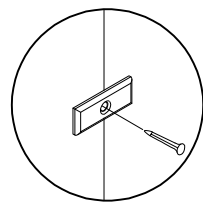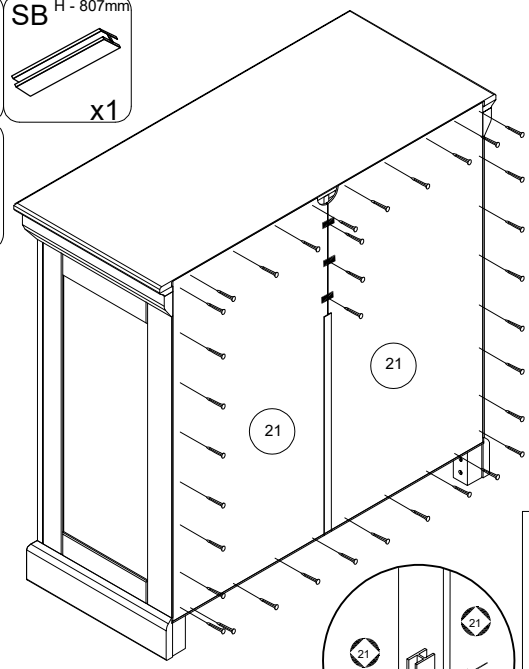

- A 8x35 x2
- B 34mm x17

