


# MARONE ELITE

## SZAFKA WĄSKA


### PLMEL 27




- |   |                                     |
|---|-------------------------------------|
| <b>(D)</b> Montageanleitung             | <b>(GB)</b> Assembly instructions   |
| <b>(FR)</b> Notice de montage           | <b>(IT)</b> Istruzioni di montaggio |
| <b>(NL)</b> Handleiding voor de montage | <b>(PL)</b> Instrukcja montażu      |
| <b>(CZ)</b> Montážní návod              | <b>(SK)</b> Návod na montáž         |
| <b>(HU)</b> Szerelési útmutató          | <b>(RO)</b> Instrucțiuni de montaj  |
| <b>(TR)</b> Montaj talimatı             | <b>(RU)</b> ИНСТРУКЦИЯ ПО МОНТАЖУ   |

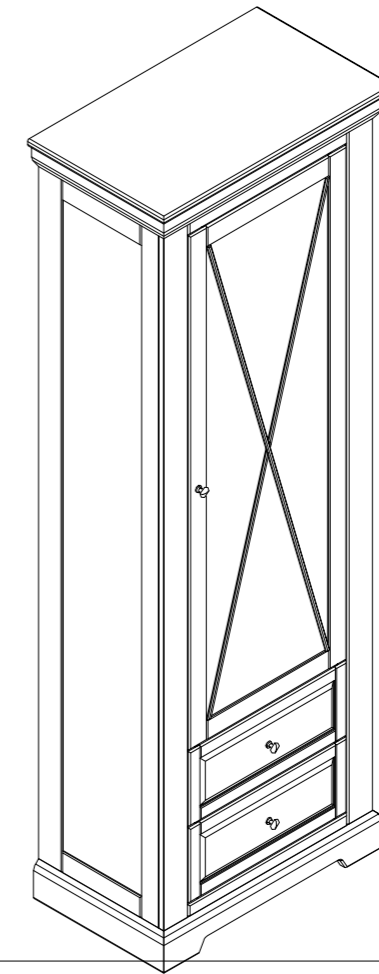


15.09.2023

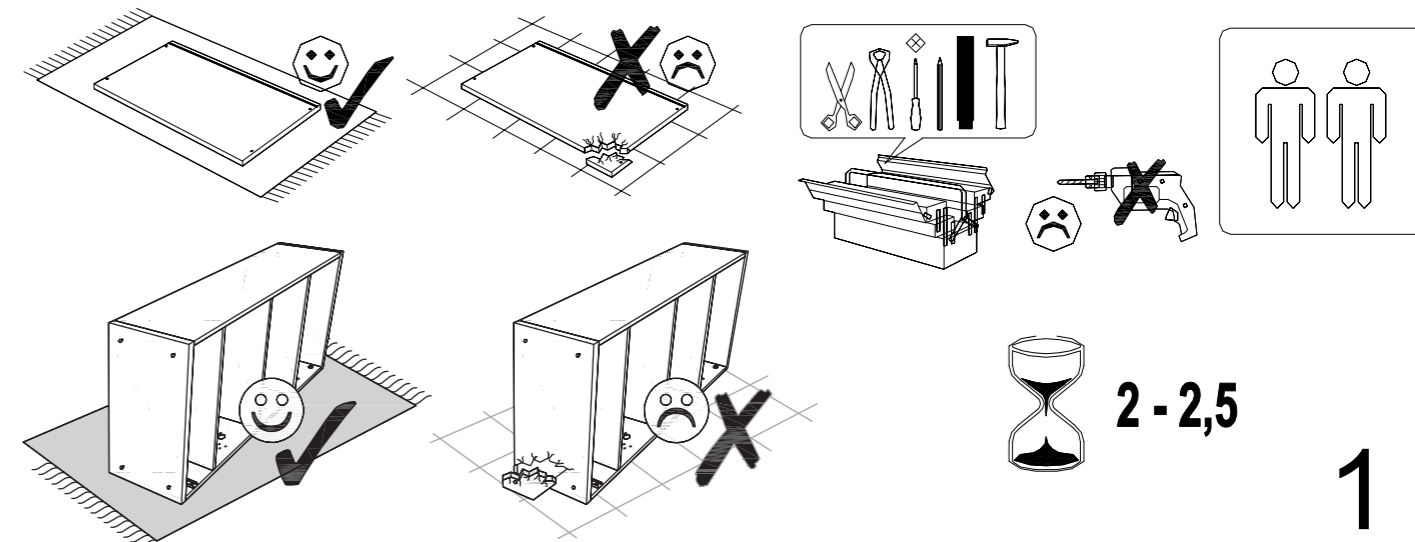


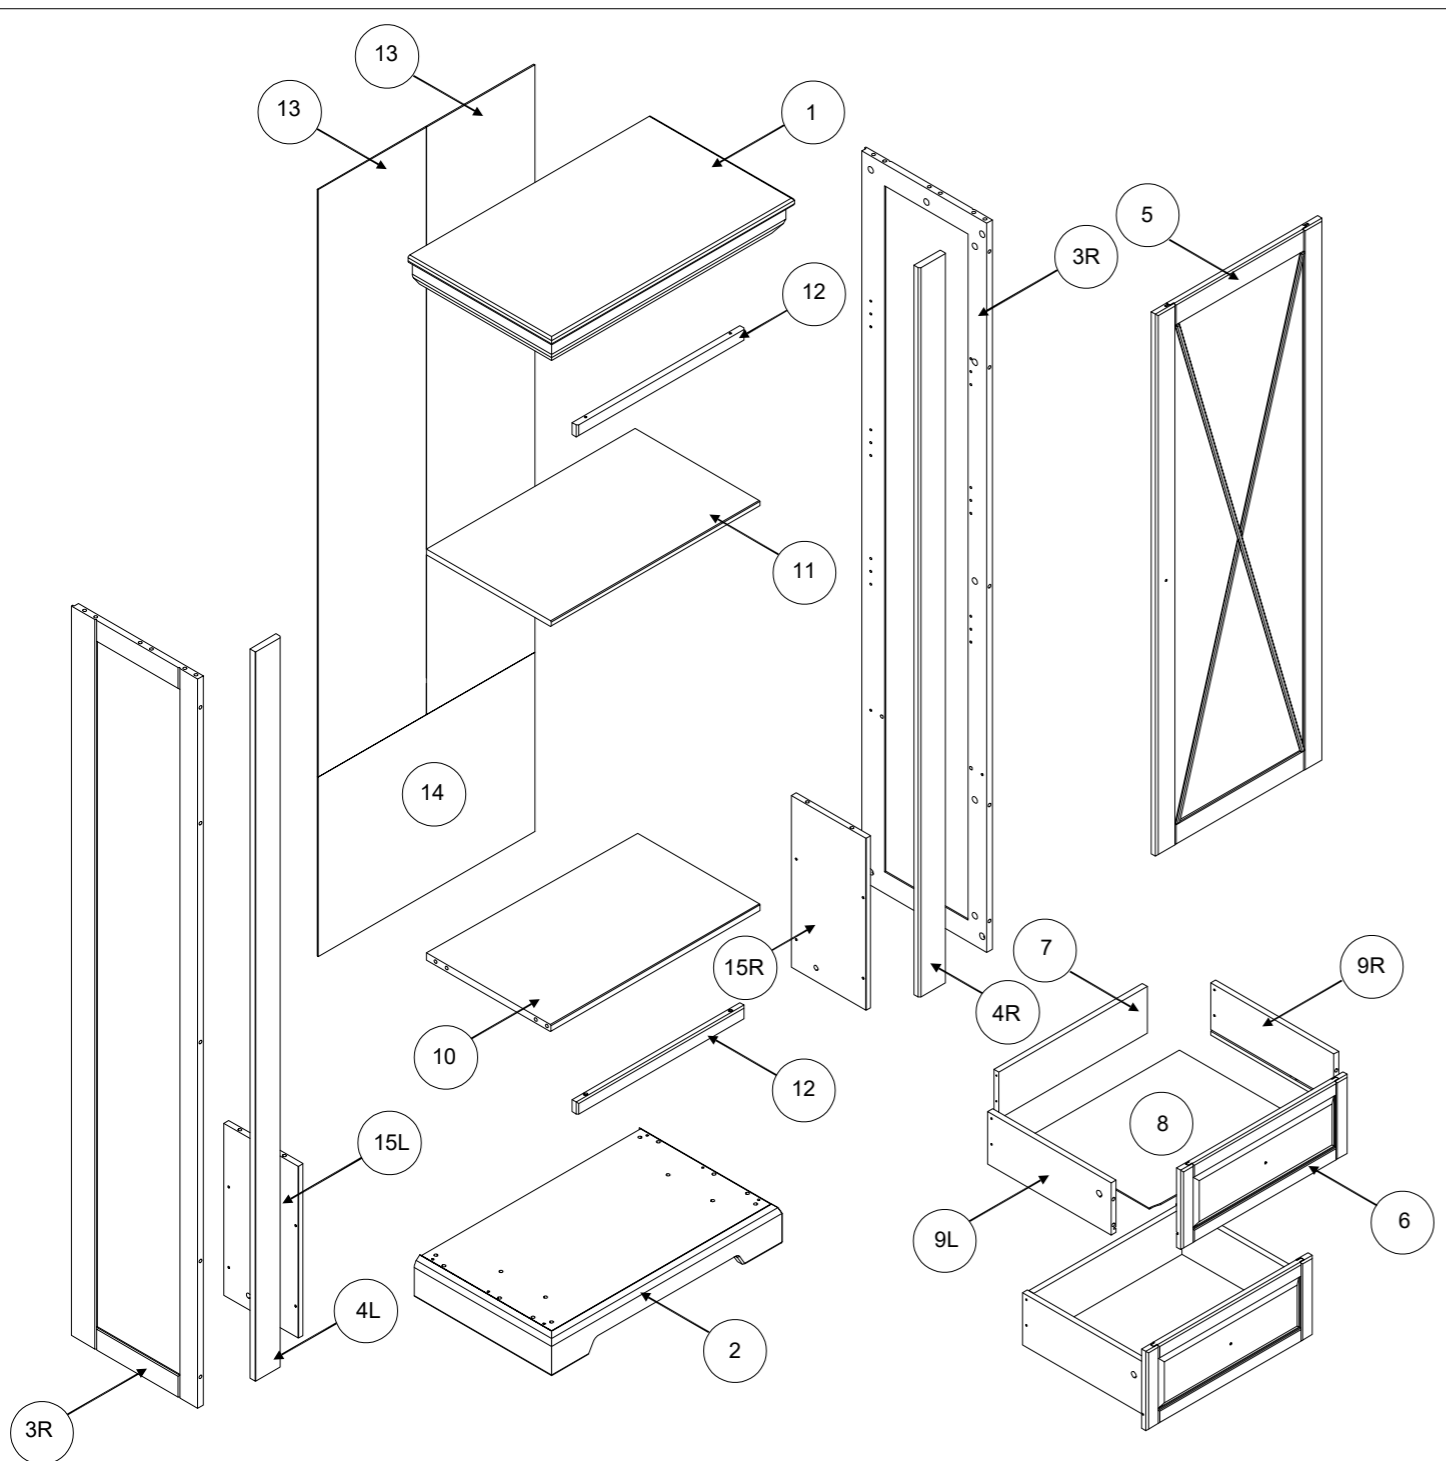



<b>A</b> 8x35 x28	<b>B</b> 34mm x34	<b>C</b> 15x10 x34	<b>G</b> L=350 x2	<b>H</b> 6x10,5 x8	<b>MA</b> x4	<b>MF</b> x2	<b>NA</b> 3,5x16 x10
<b>NC</b> 3x16 x4	<b>NT</b> 3,5x40 x12	<b>O</b> x3	<b>P</b> x3	<b>R</b> x3	<b>T</b> x1	<b>W</b> 4mm x1	<b>ZA</b> 12mm x4
<b>ZD</b> 18mm x17	<b>ZF</b> x1	<b>YA</b> 7x50 x4	<b>YB</b> 1x20 x53	<b>YF</b> M4x25 x3	<b>XE</b> x1	<b>XF</b> x1	

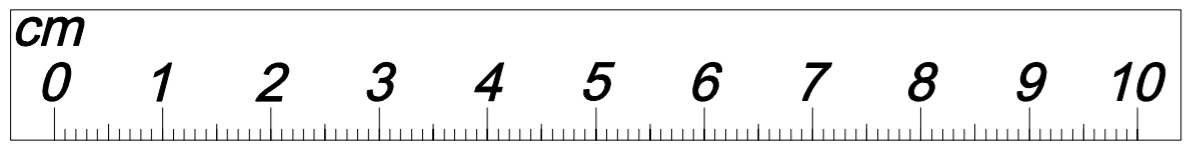


2

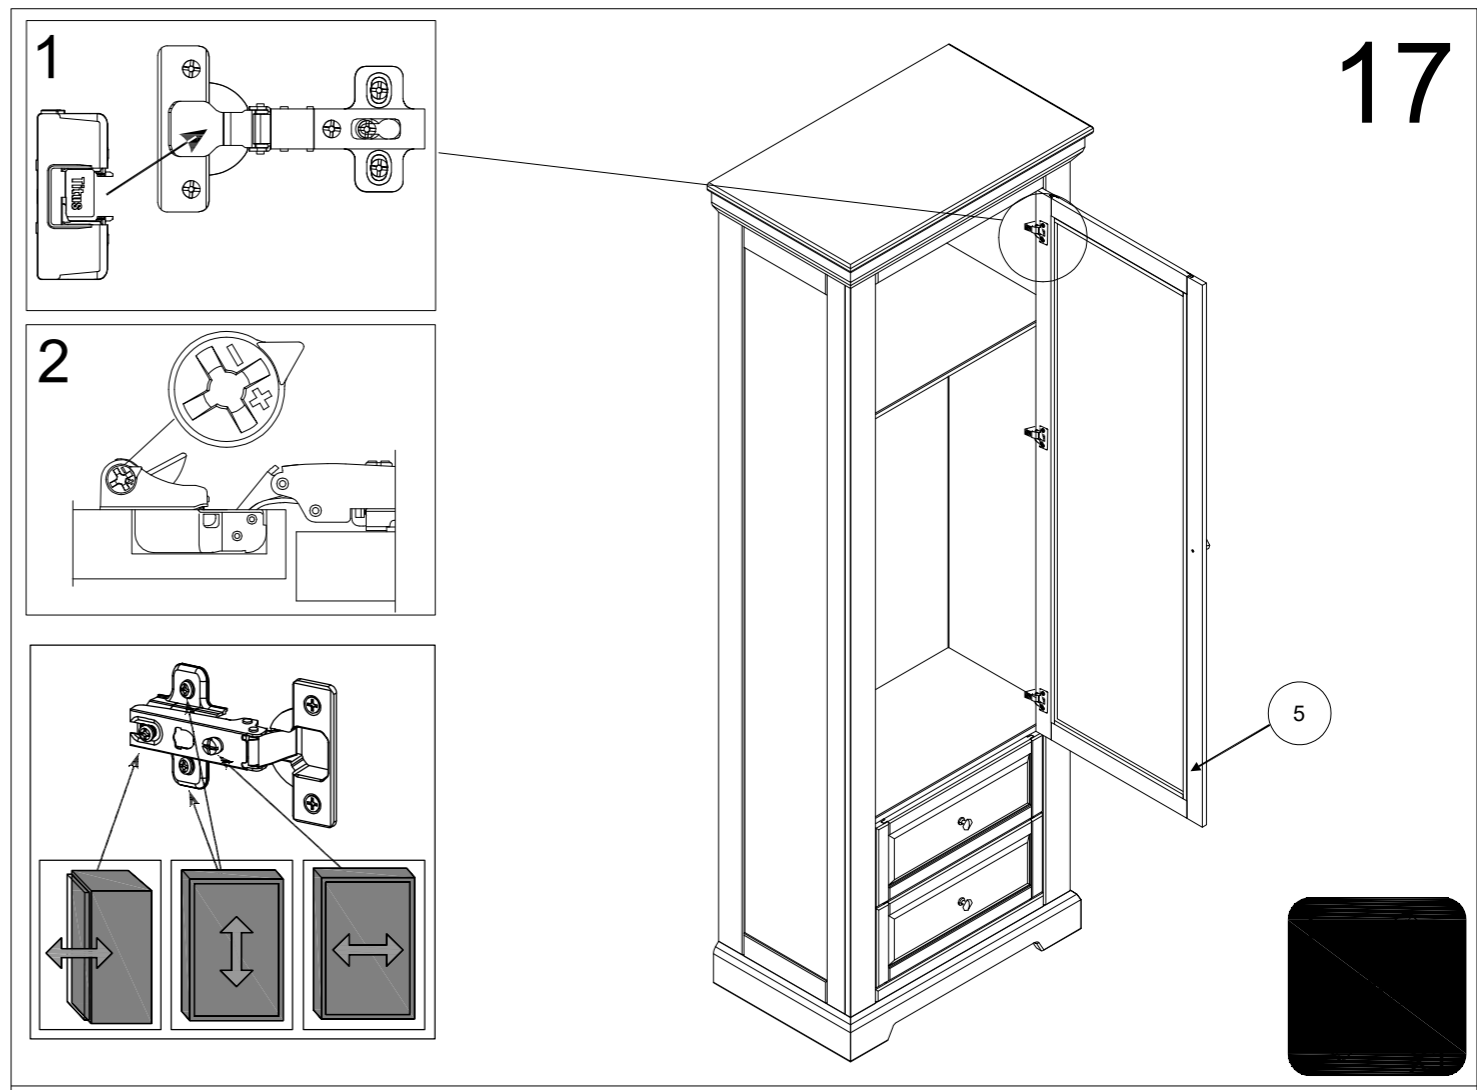





17

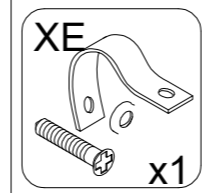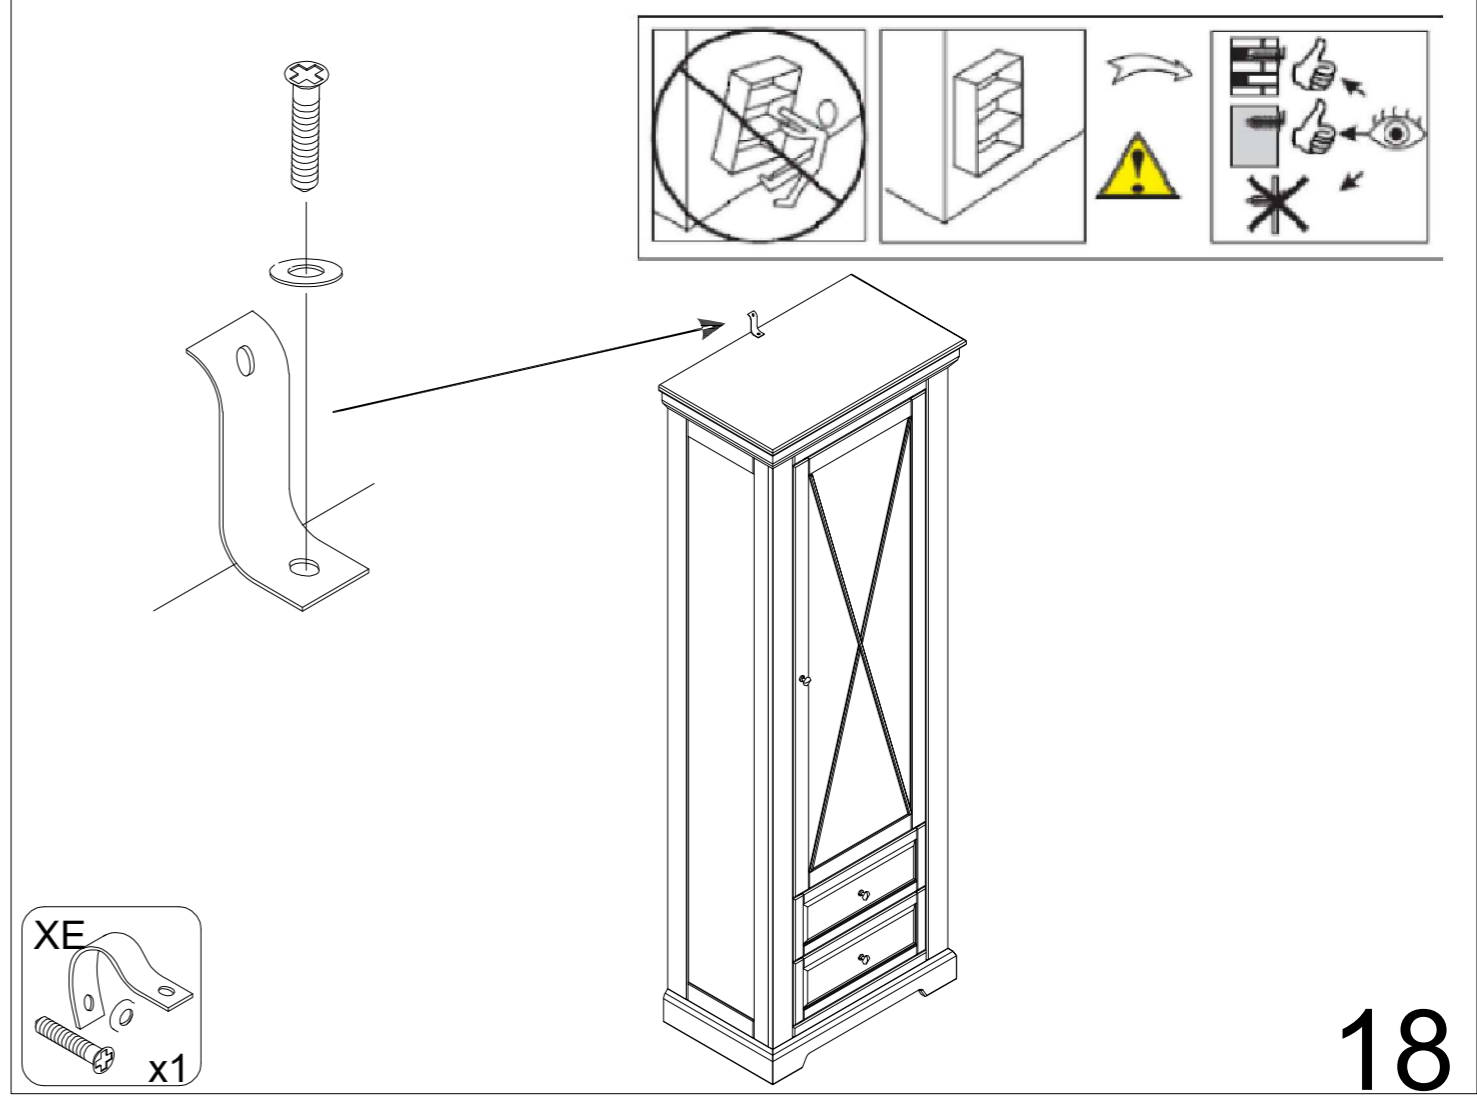


18

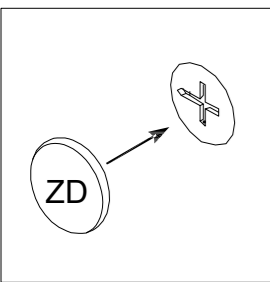


- NC 3x16 x4
- XF x1
- ZD 18mm x17

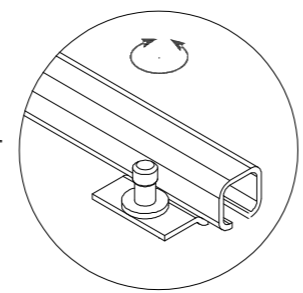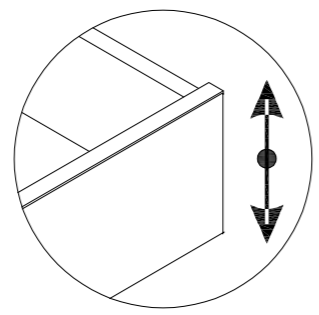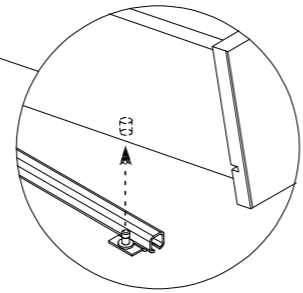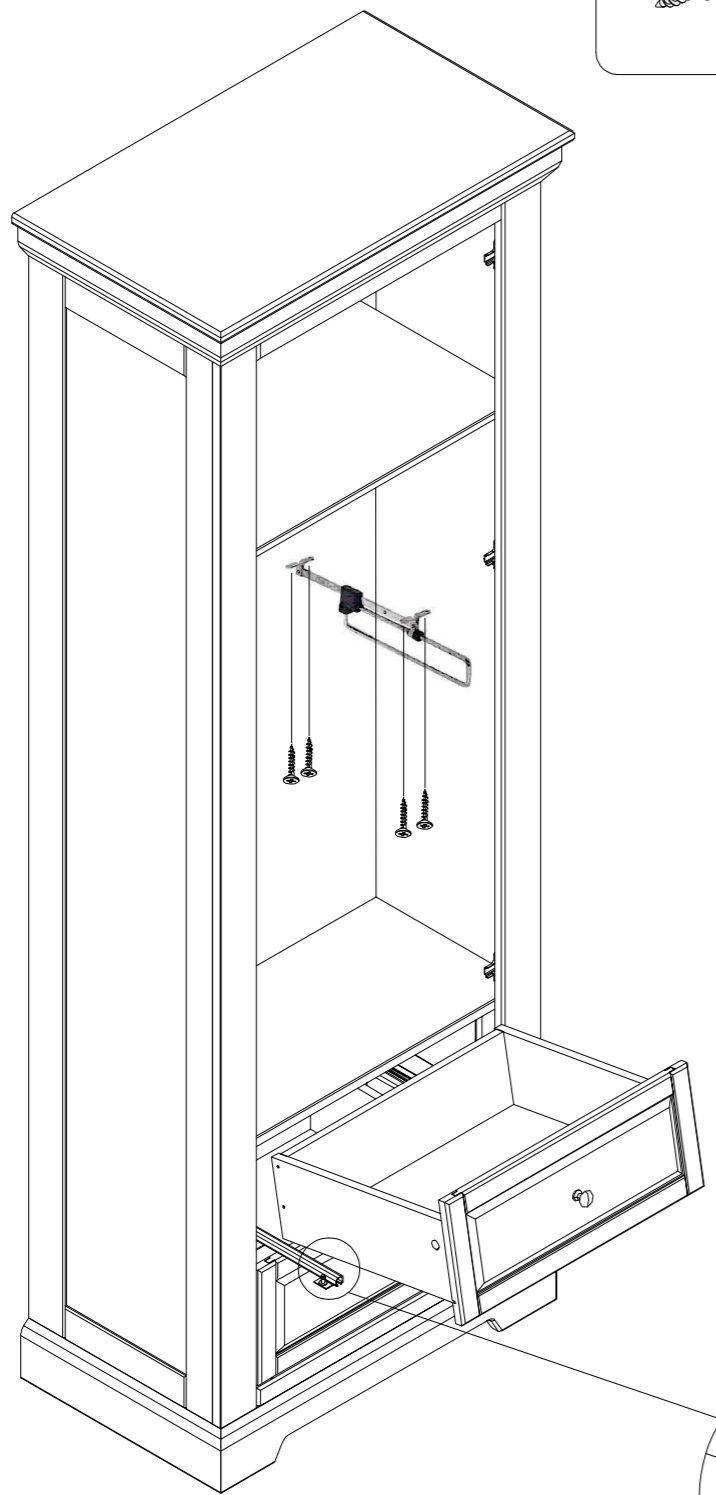


16

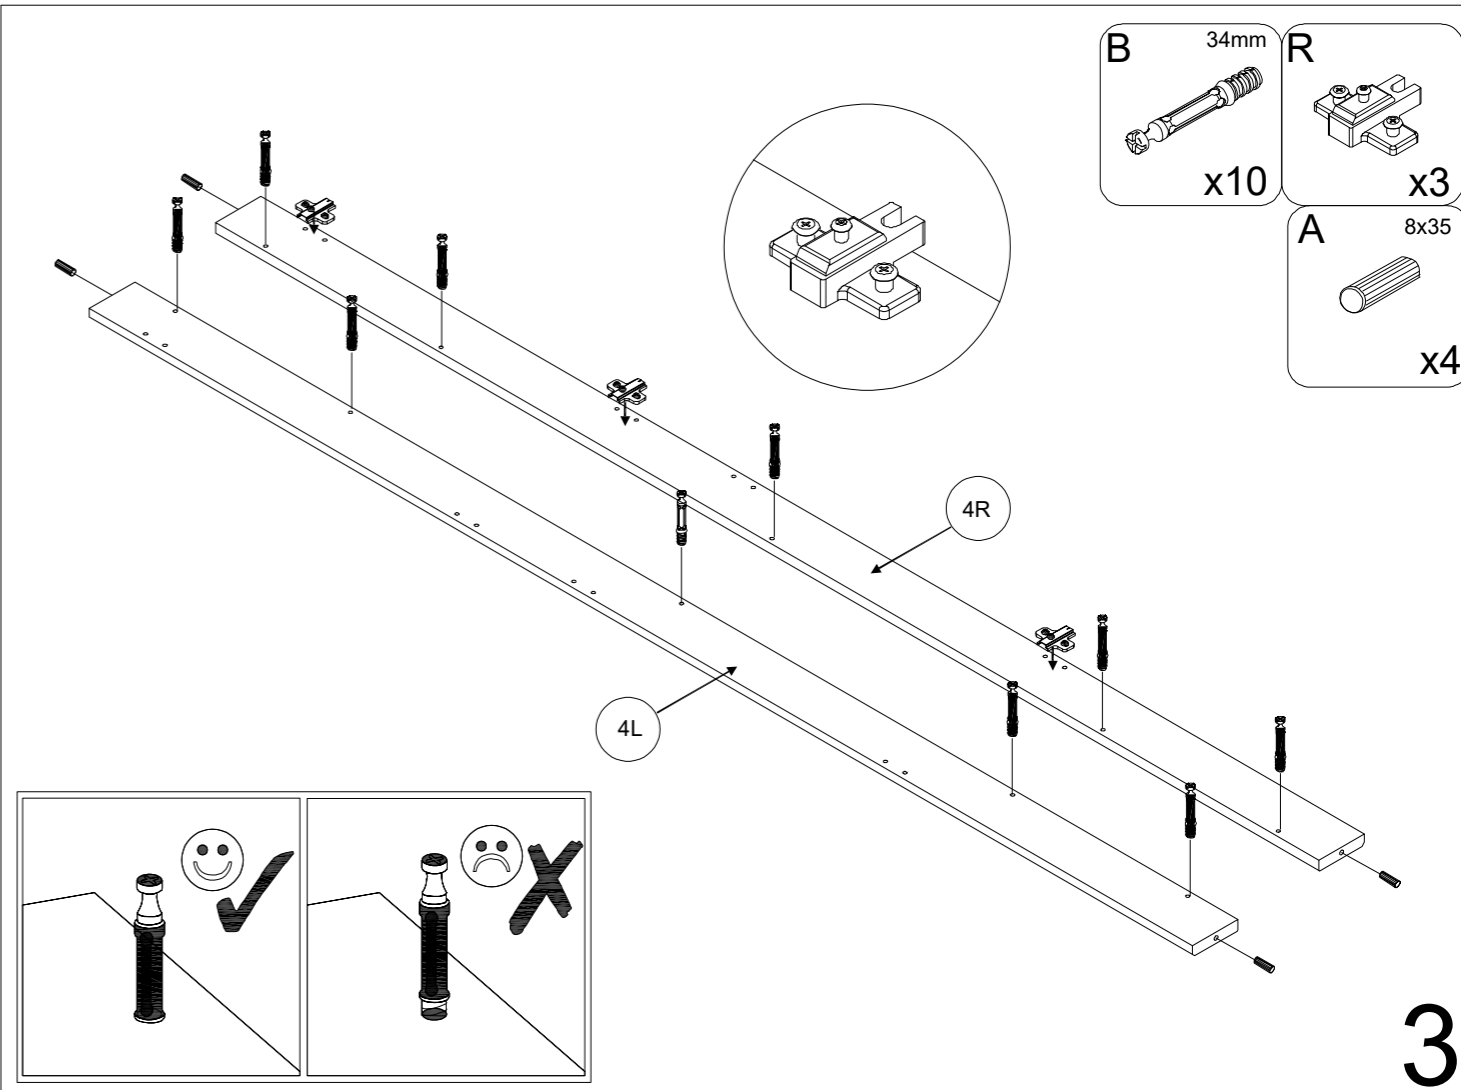


- B 34mm x10
- R x3
- A 8x35 x4



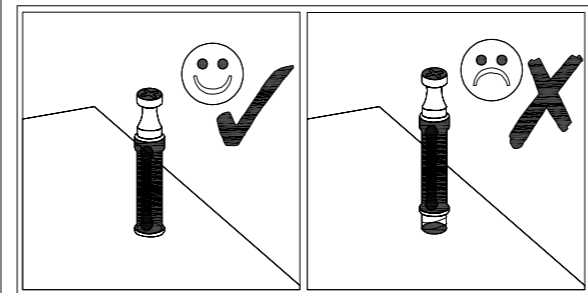






3  
4

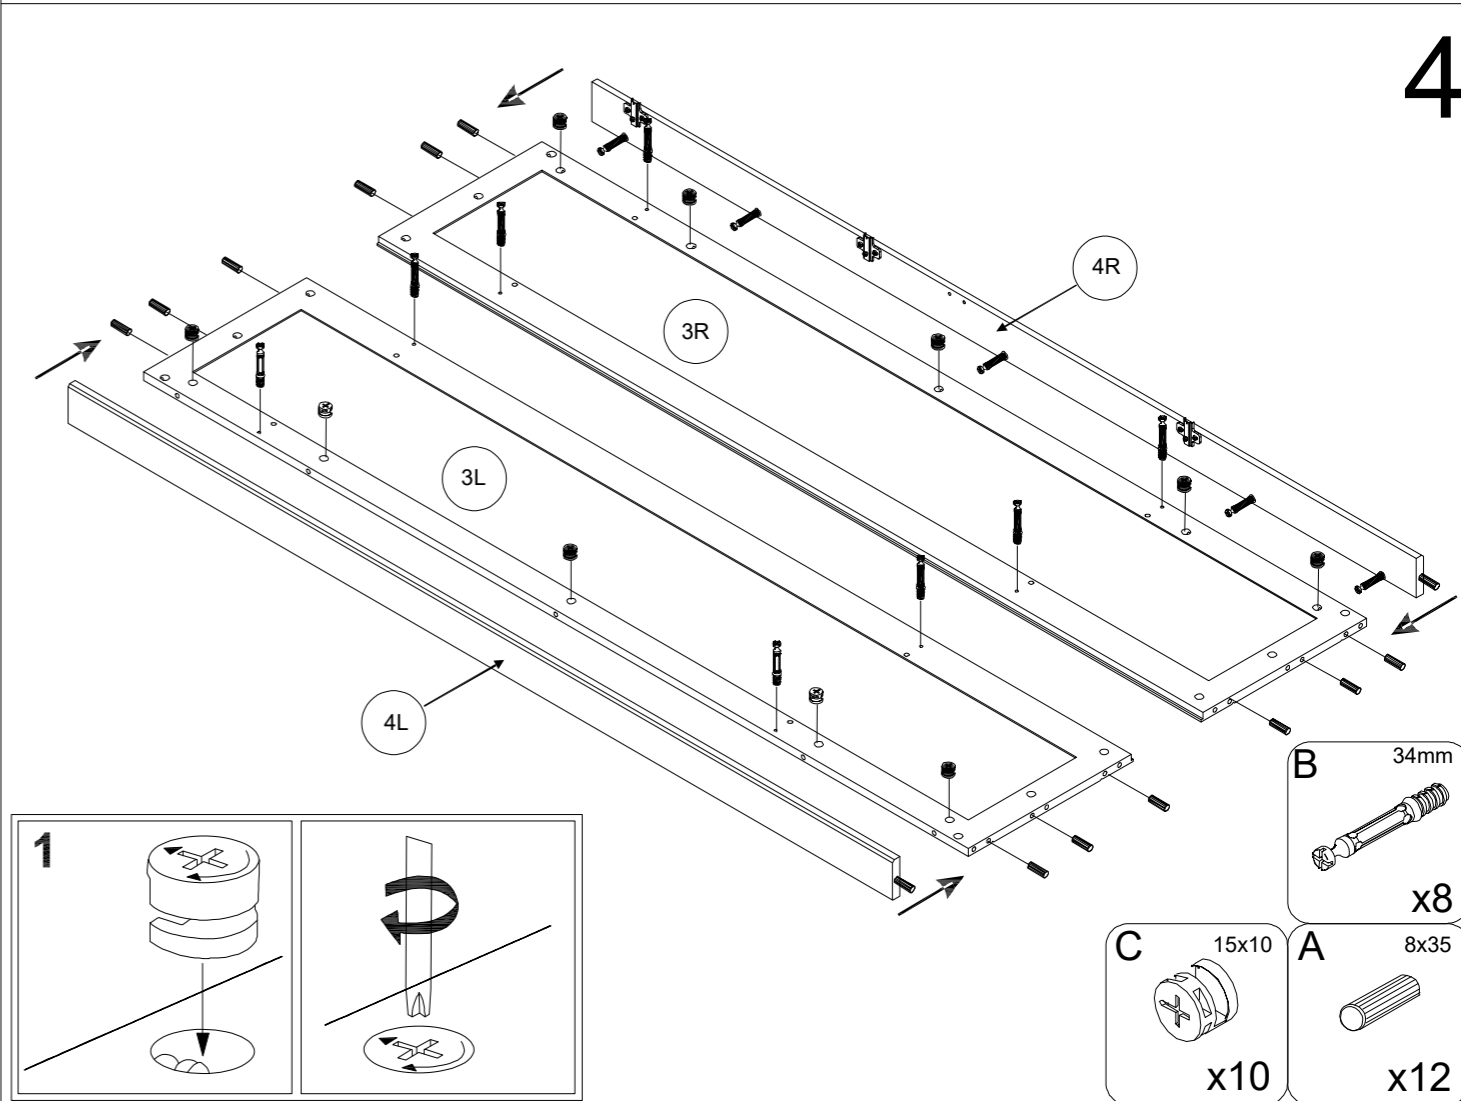




- B 34mm x8
- A 8x35 x12
- C 15x10 x10

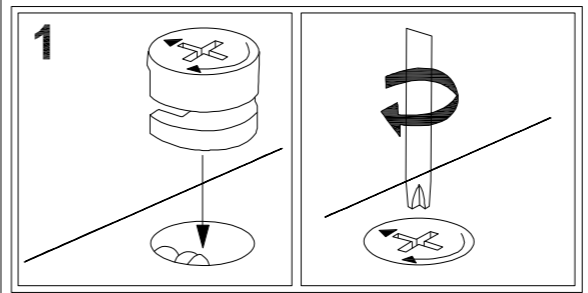

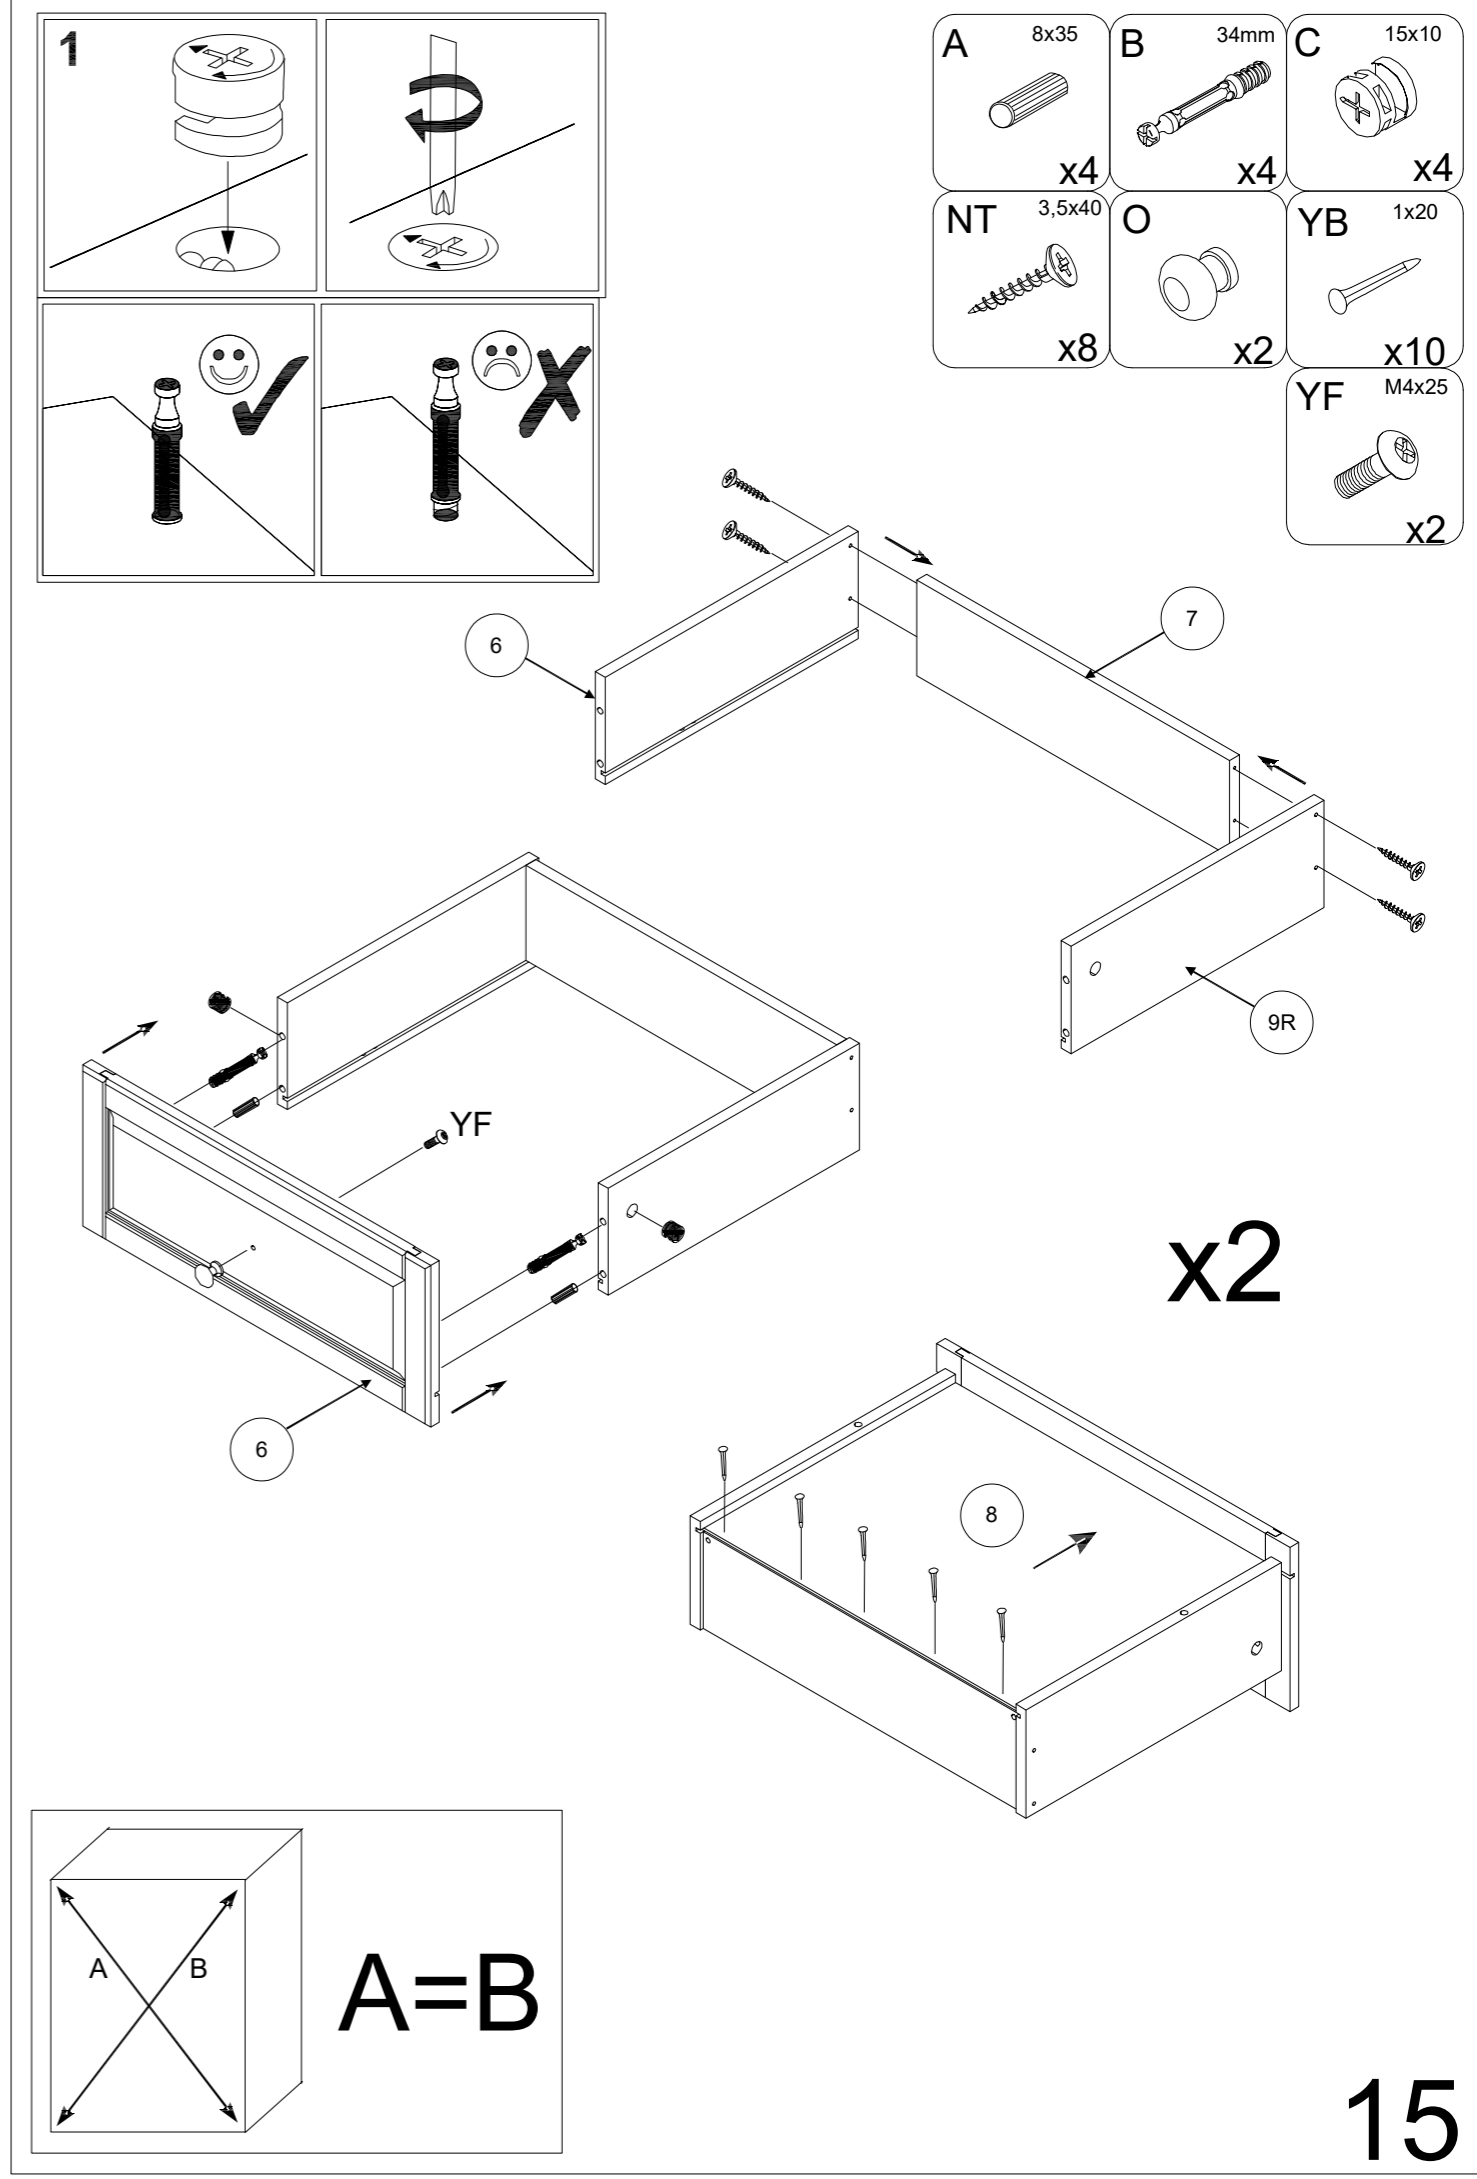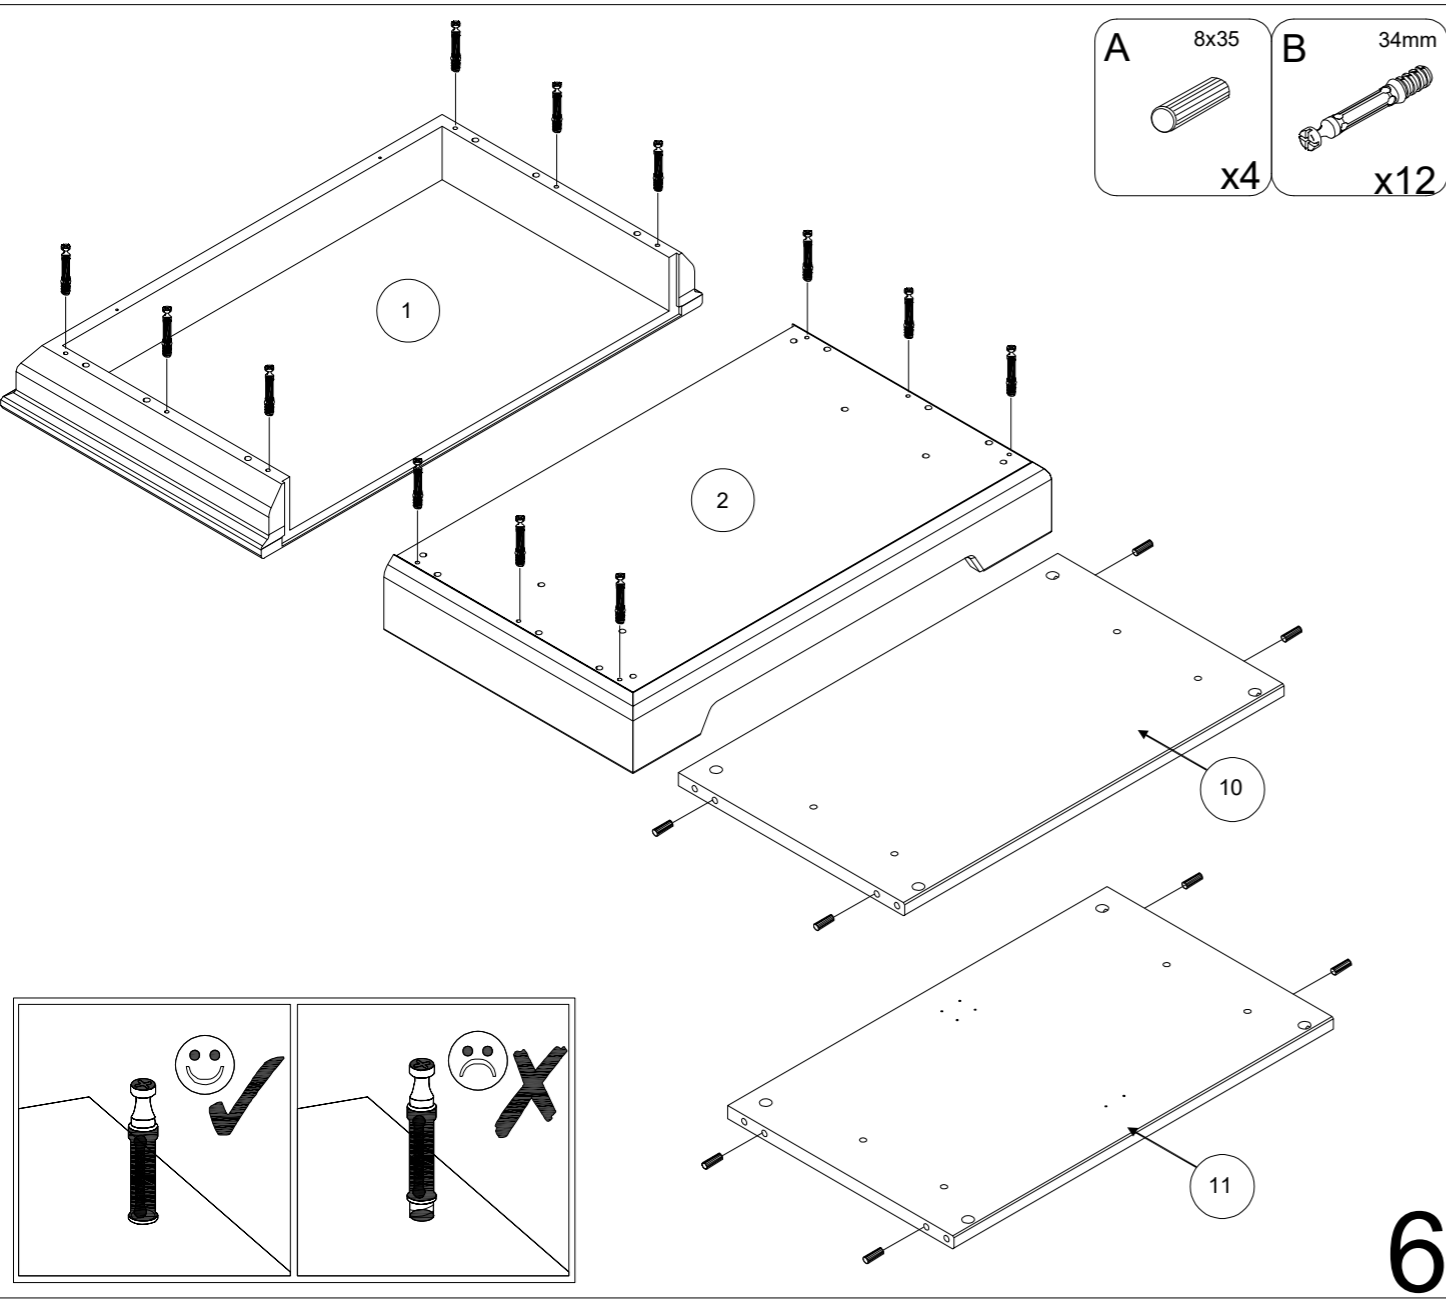
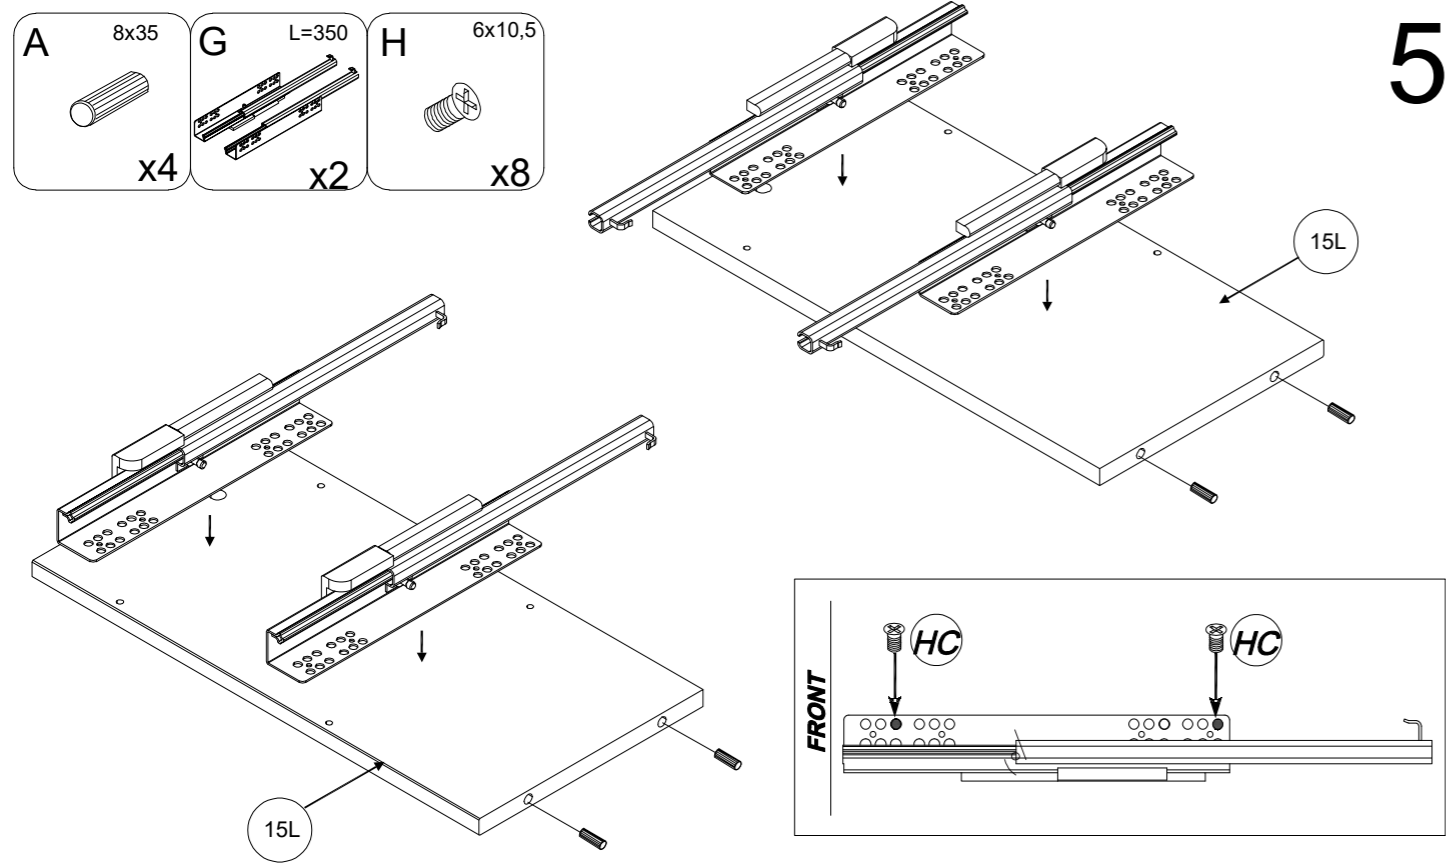


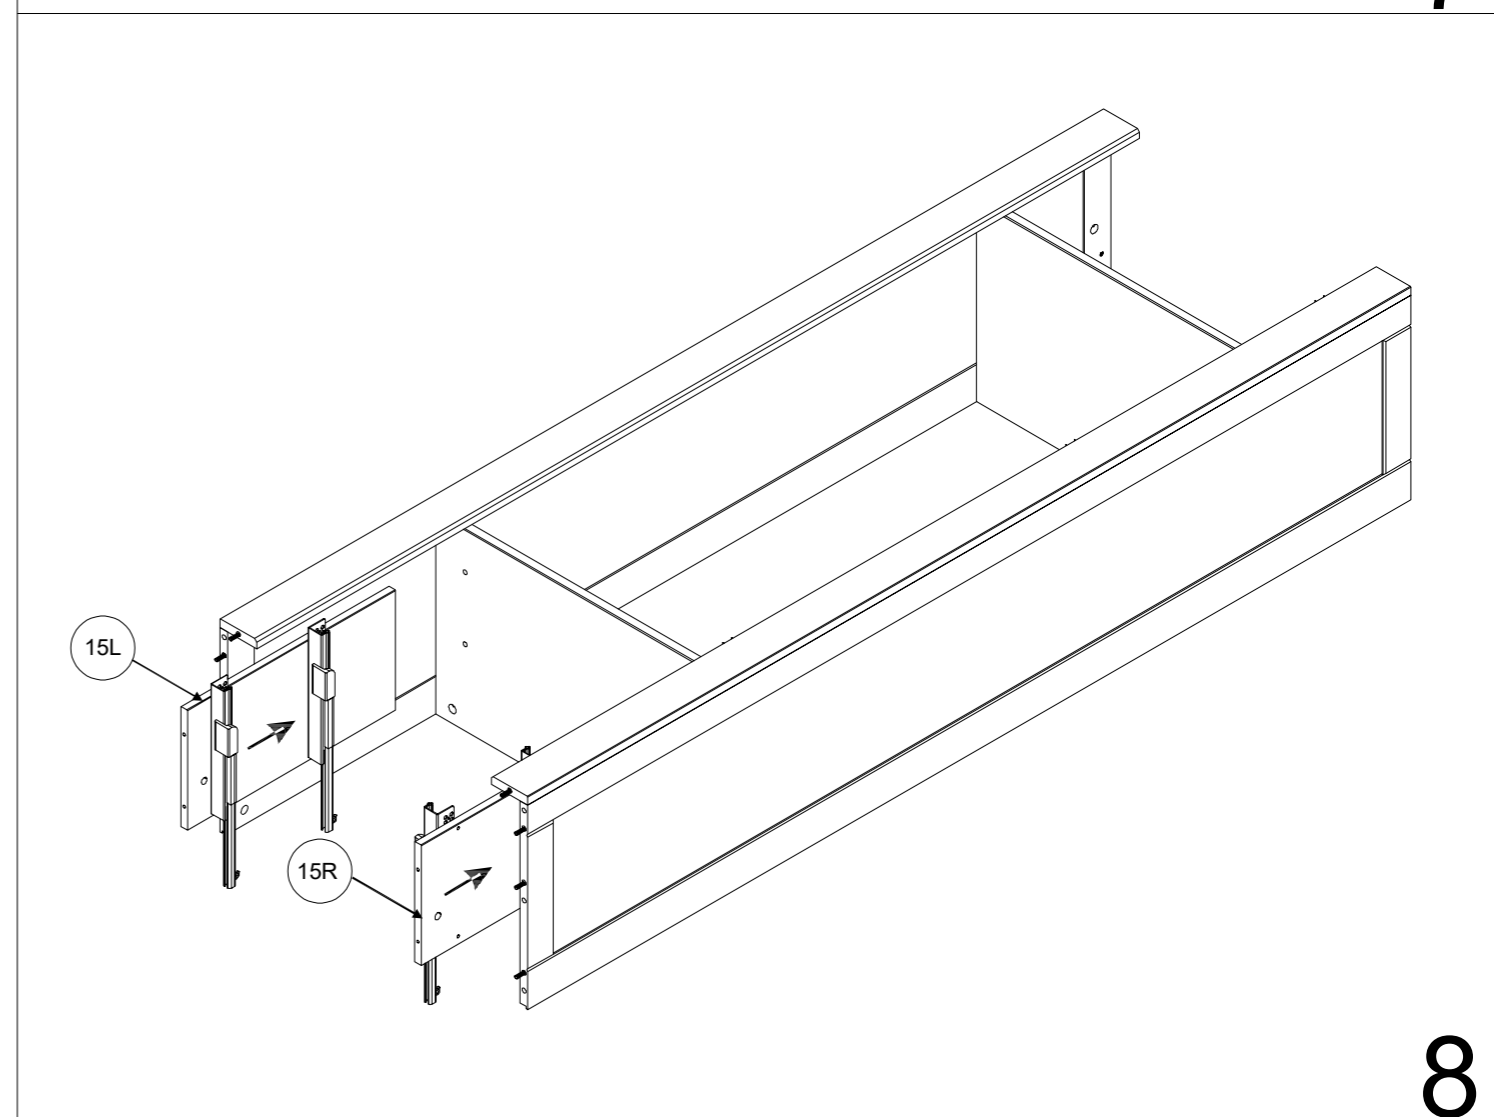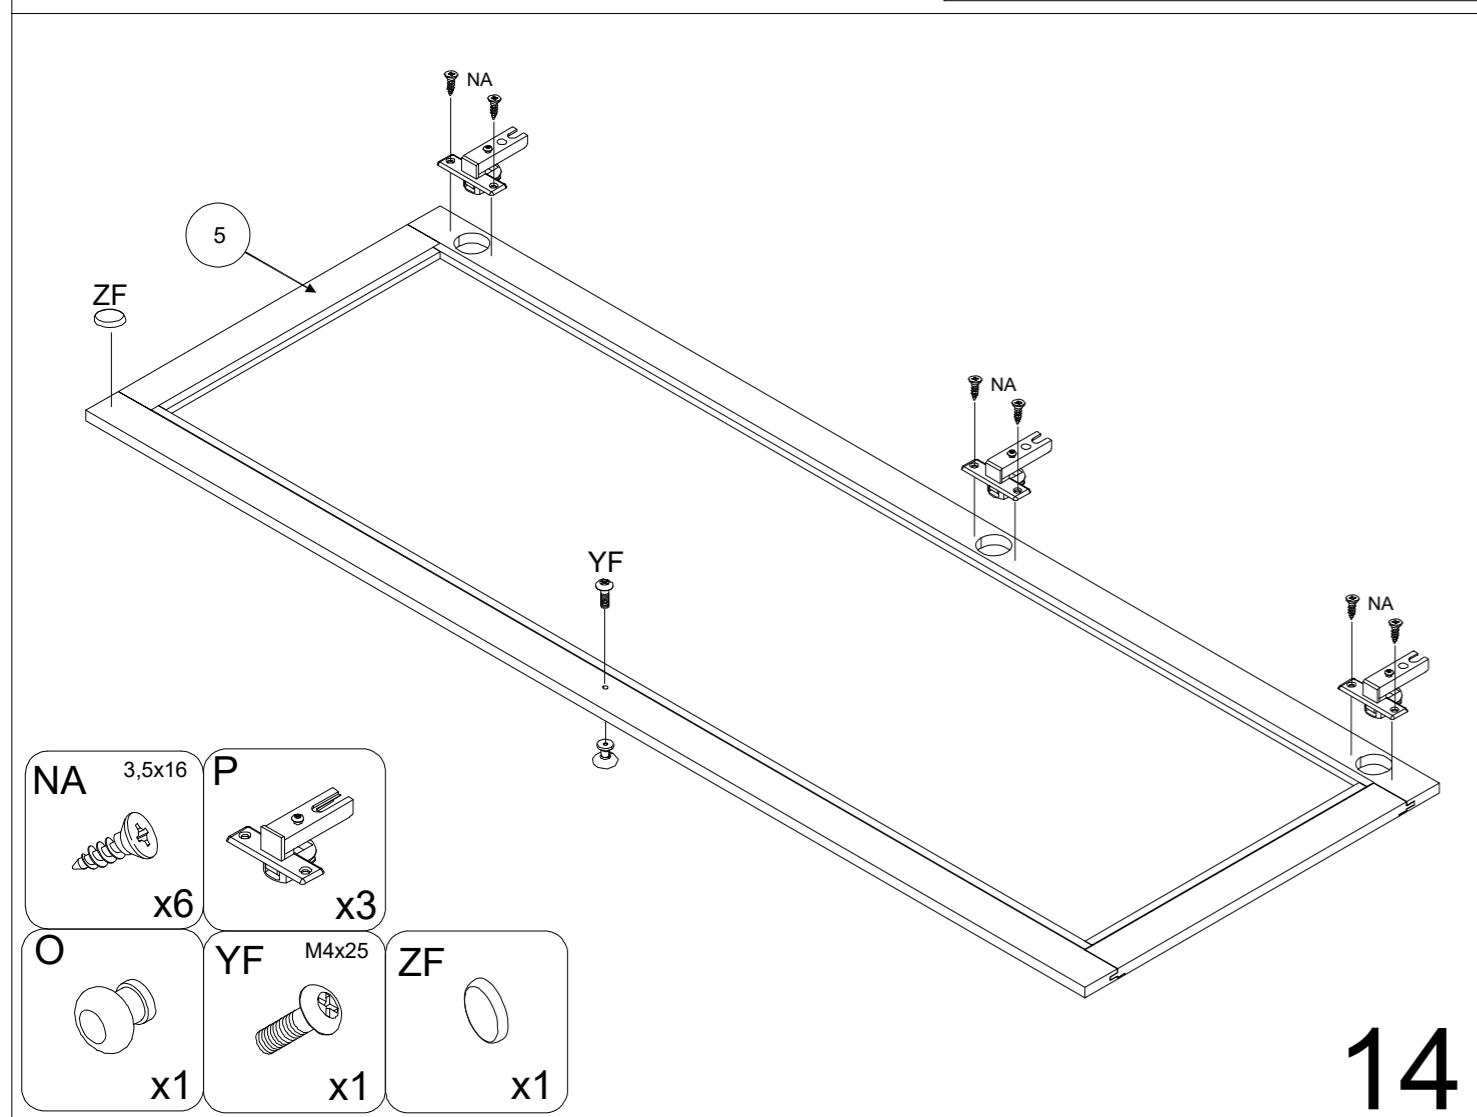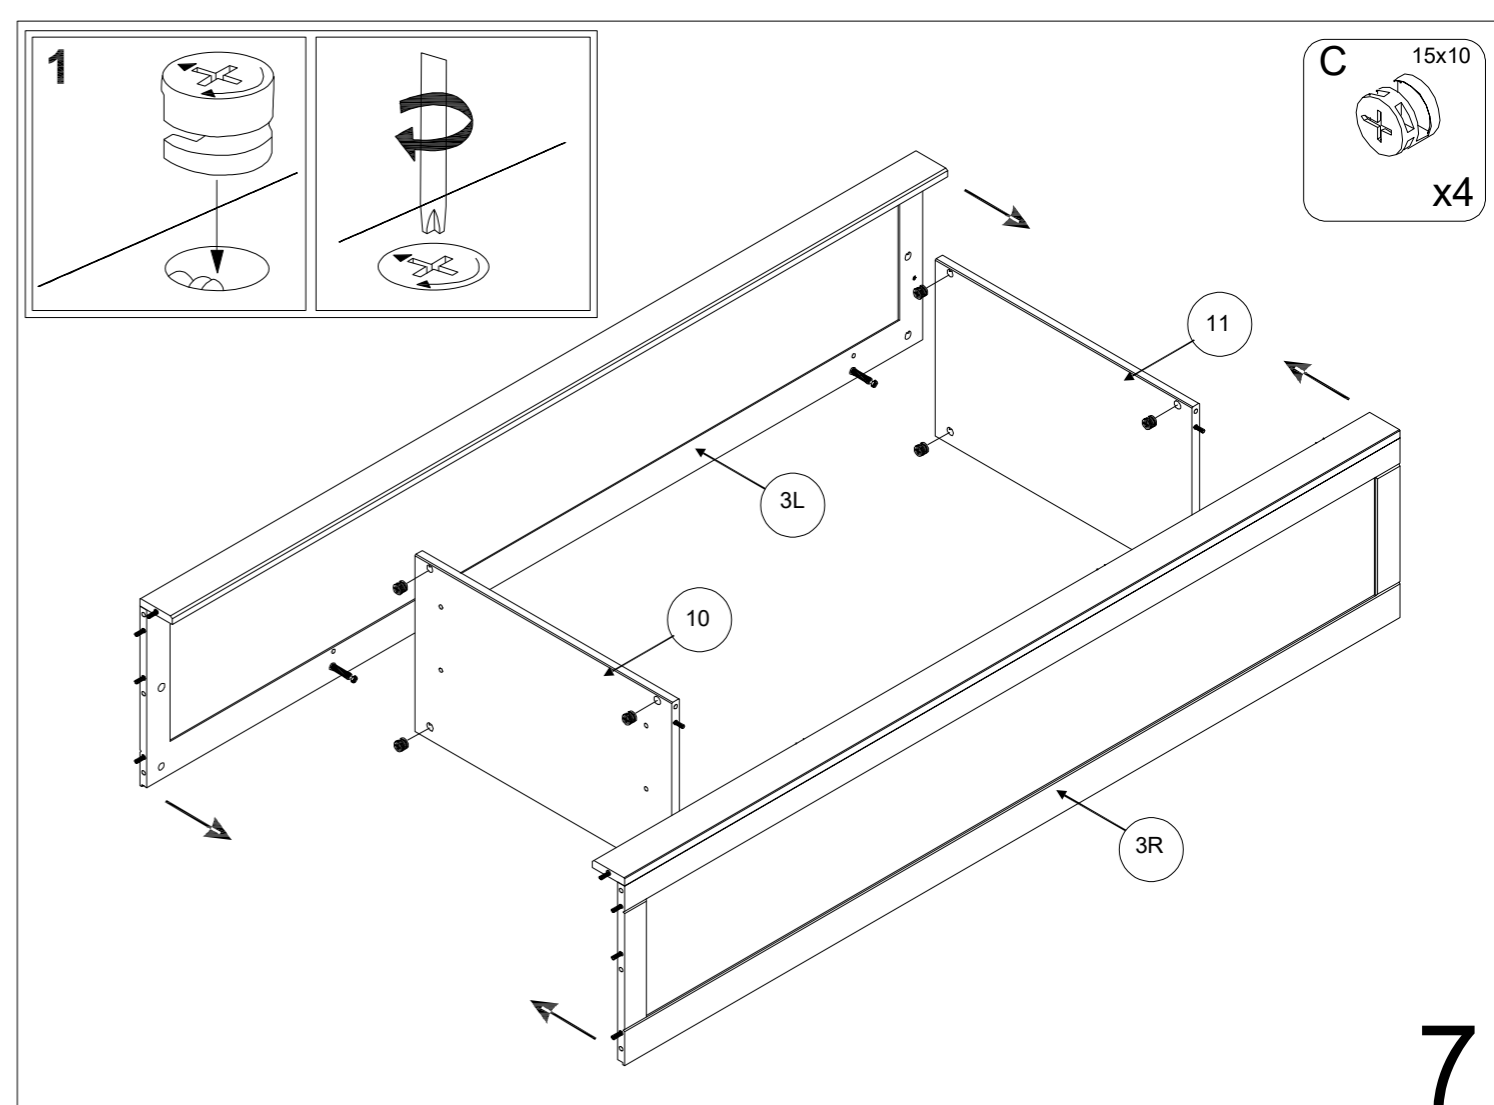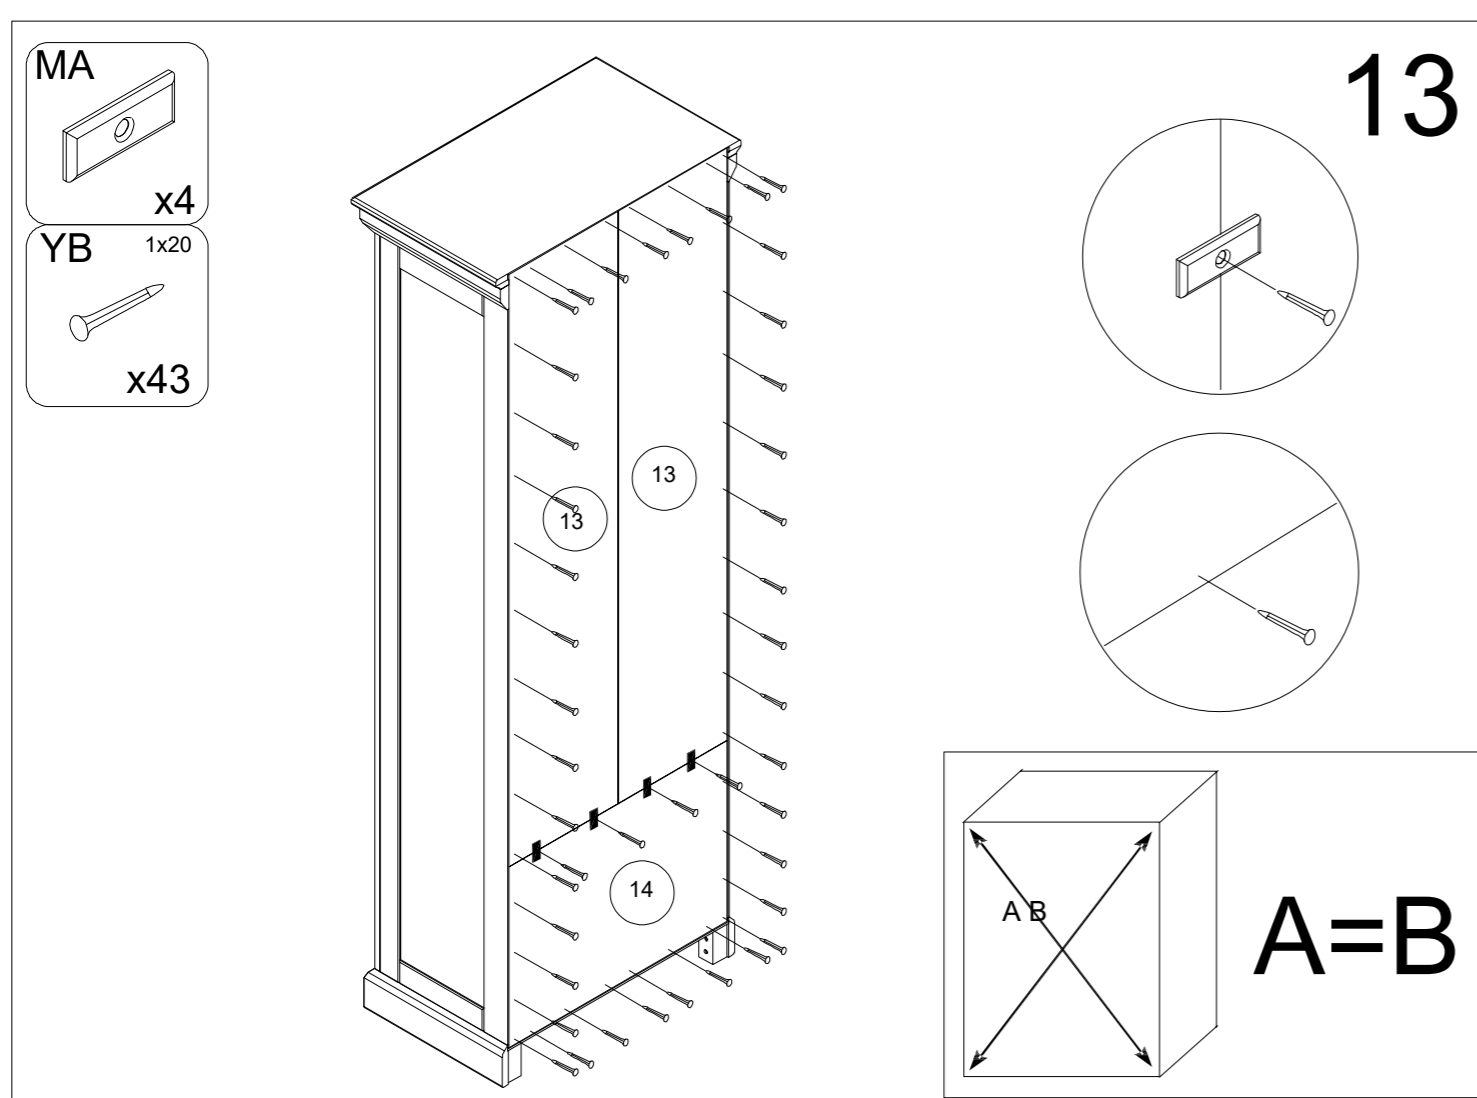






9

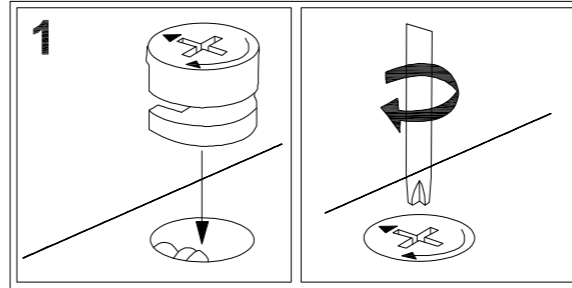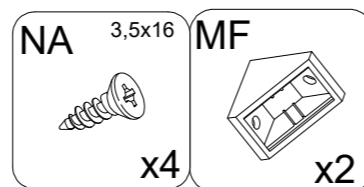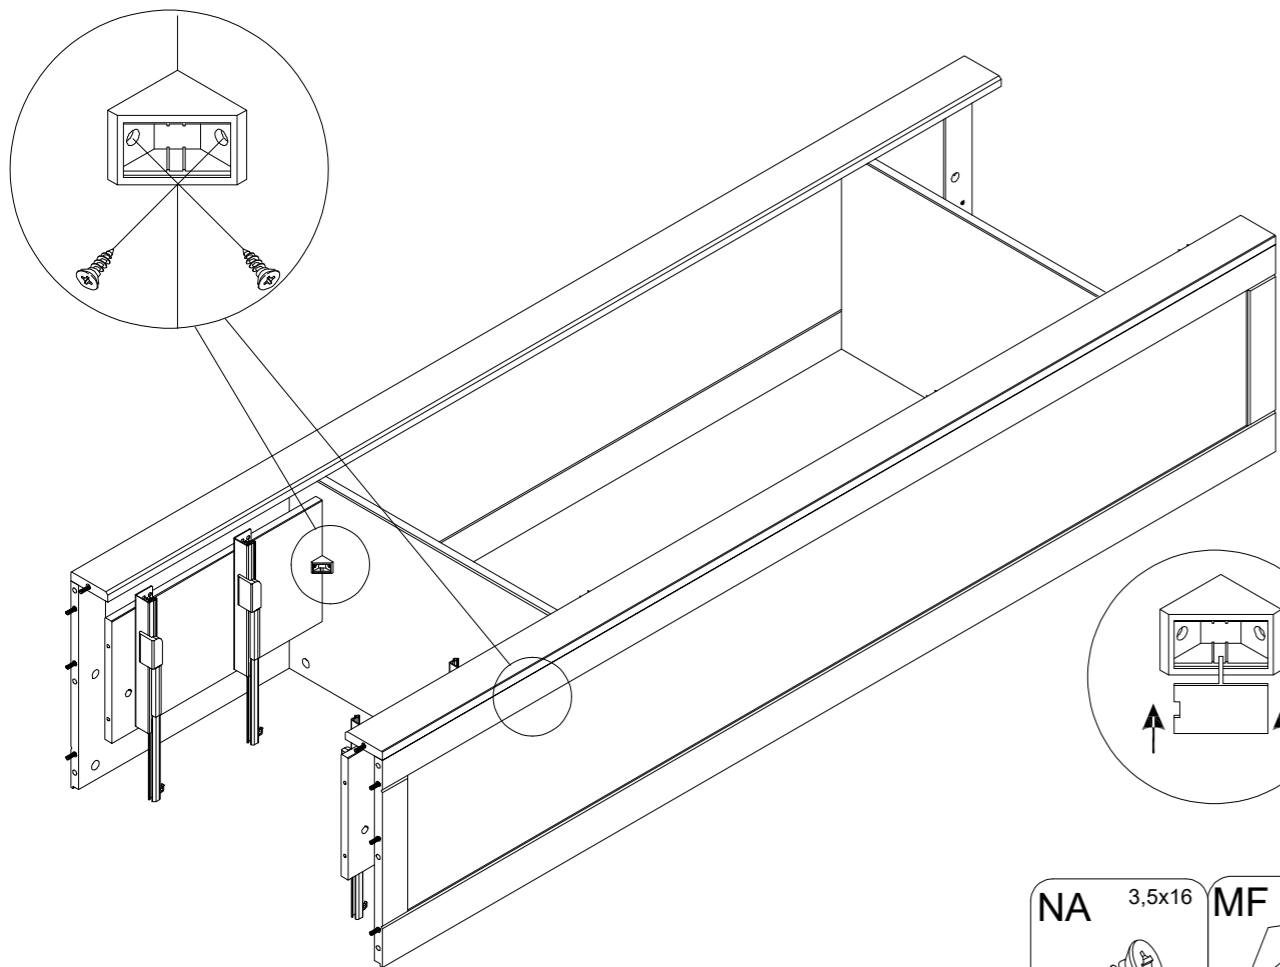

11

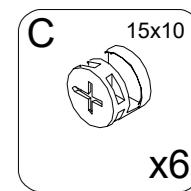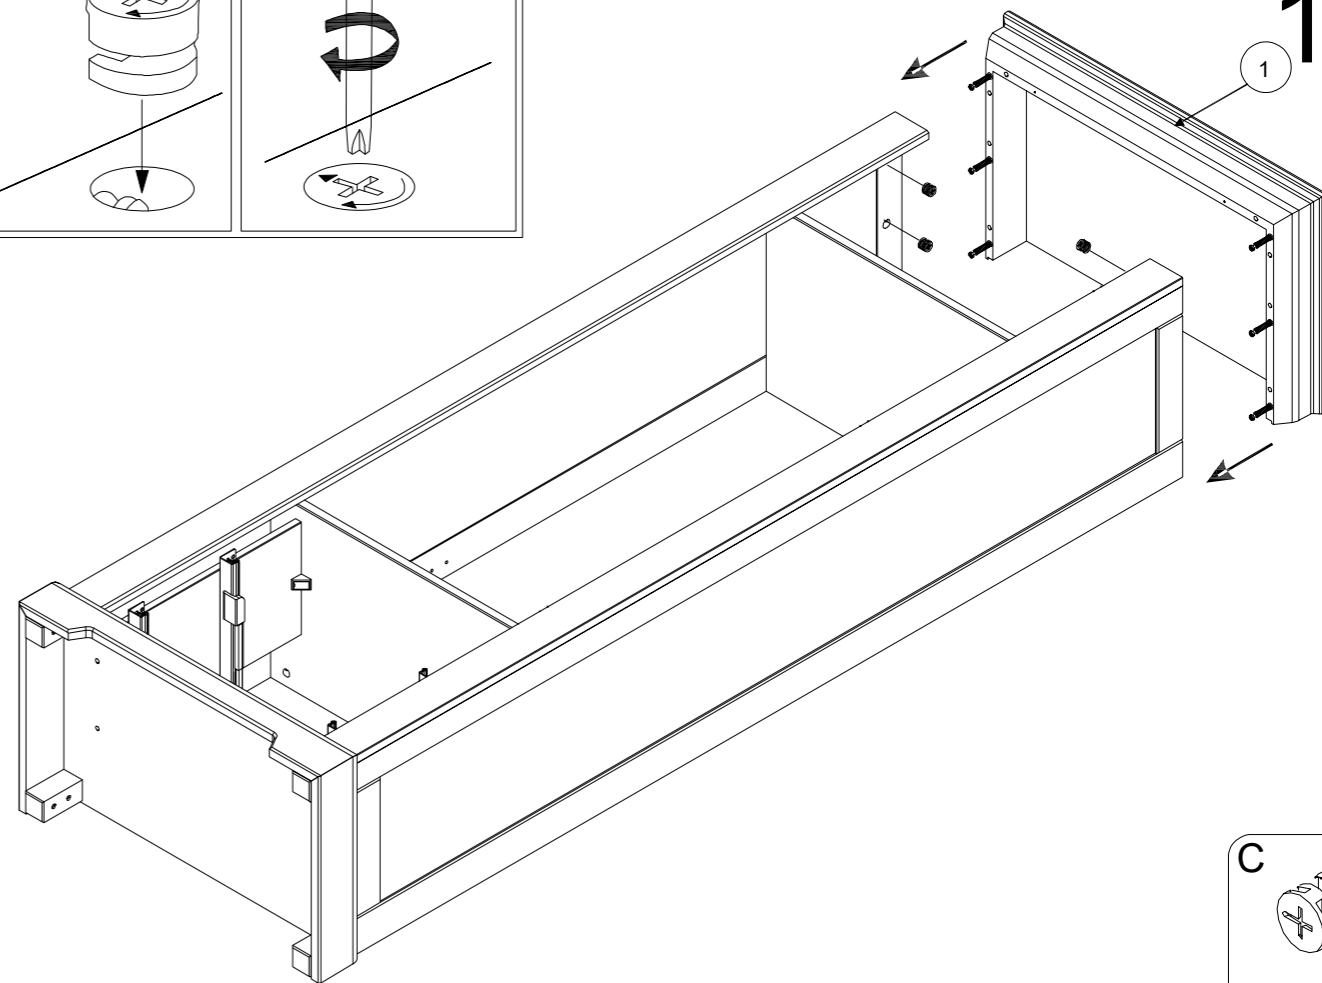

10

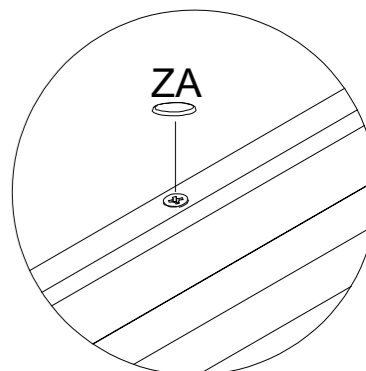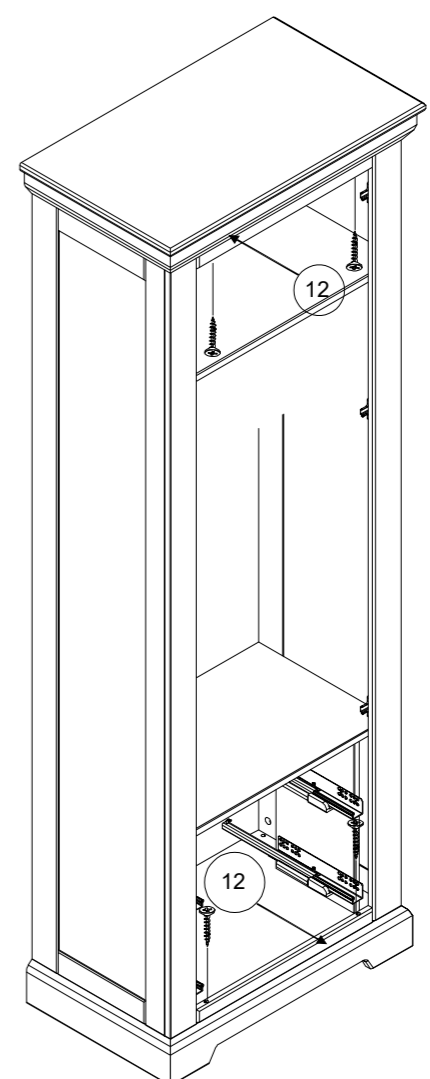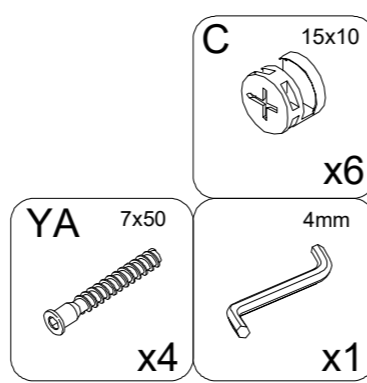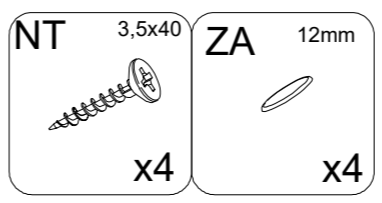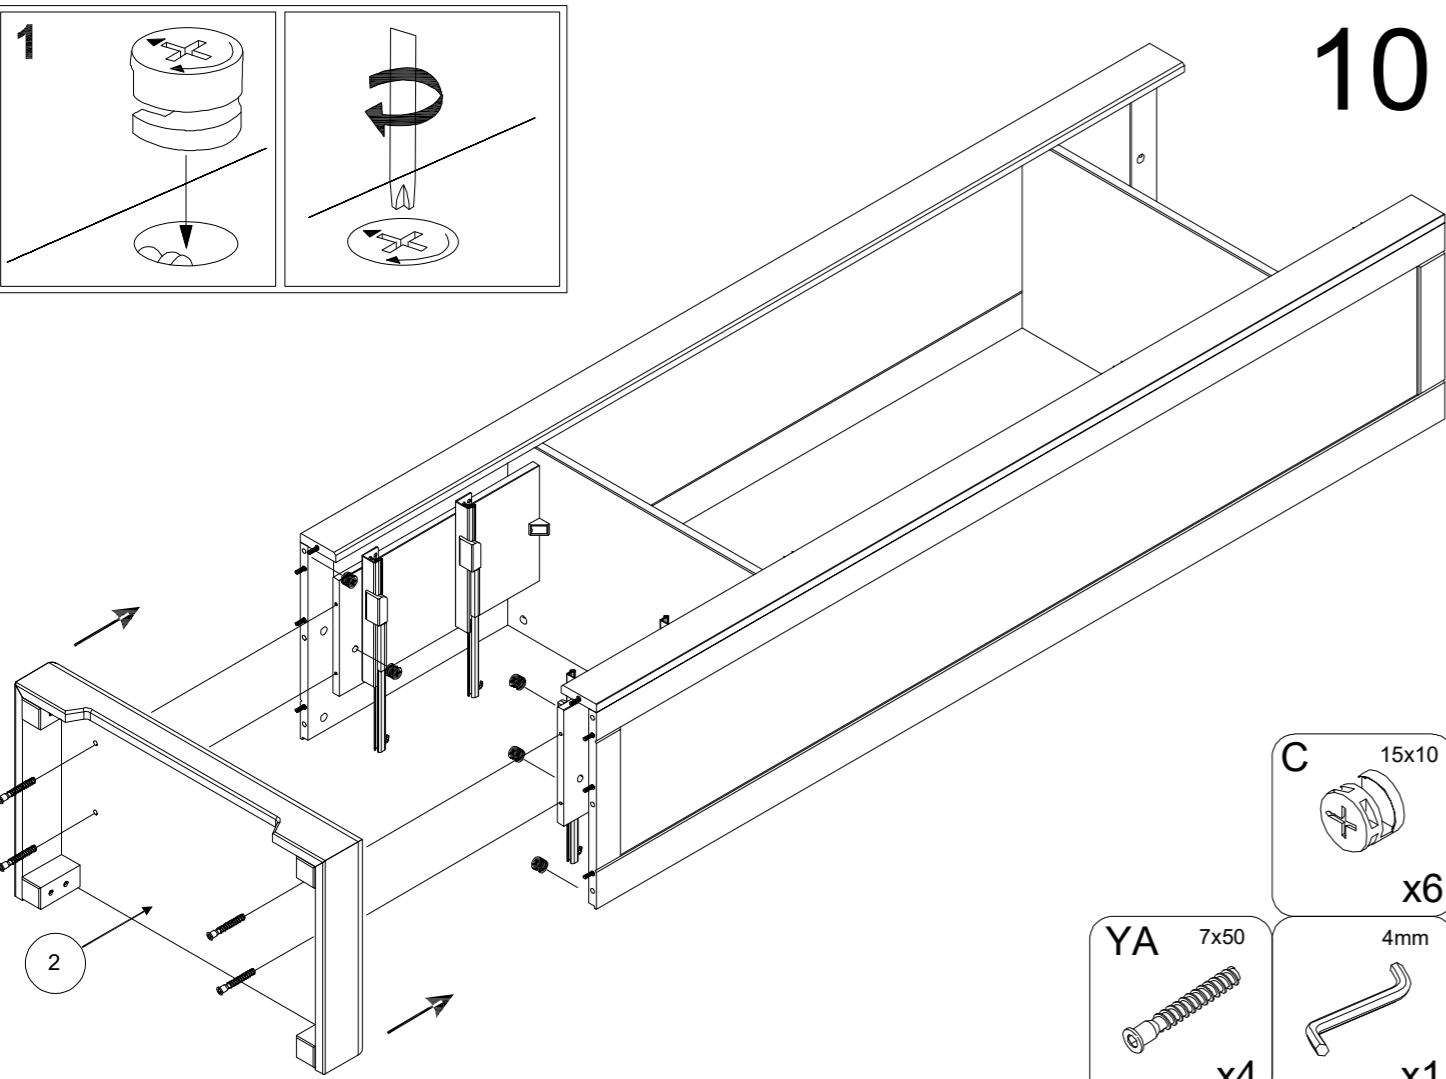

12